


# LOCATION

## Sliding Roof Assembly


- Sliding Roof ECU
- Sliding Roof Switch
- Sliding Roof Motor

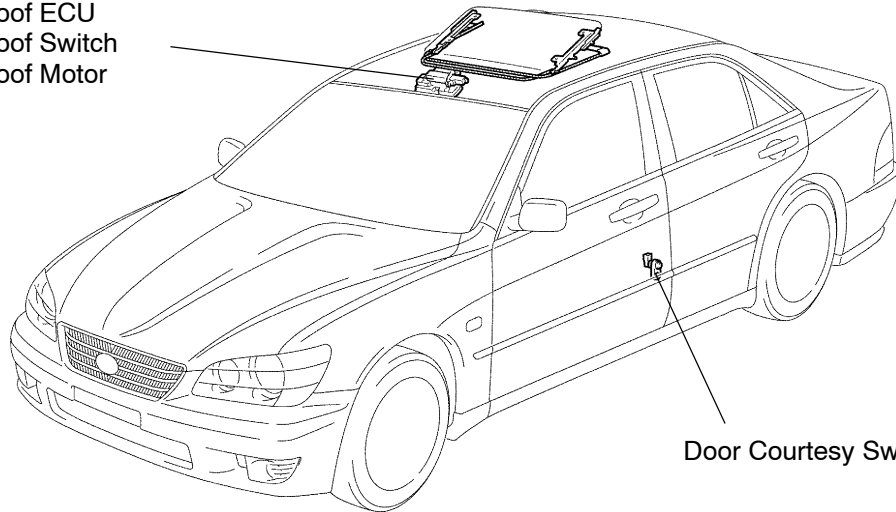

Door Courtesy Switch

## Driver Side J/B

- GAUGE Fuse
- POWER Fuse
- Power Main Relay
- Body ECU

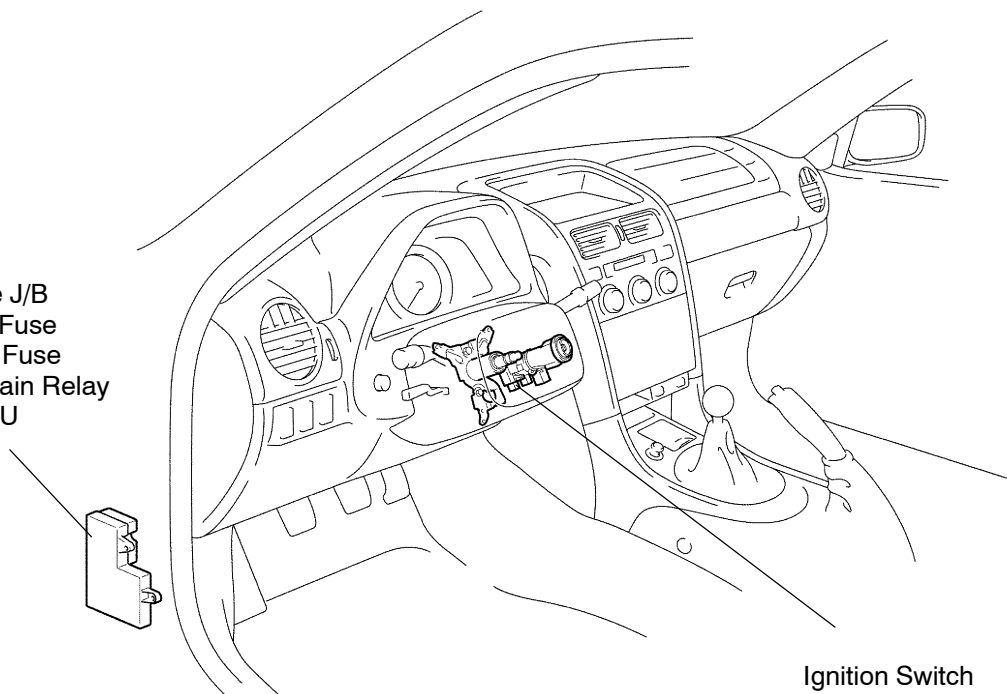

Ignition Switch