


## REMOVAL

### HINT:


Installation is in the reverse order of removal.

1. **w/o LEXUS Navigation System:**  
**REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER**
2. **w/ LEXUS Navigation System:**  
**REMOVE CENTER CLUSTER OPENING COVER**
3. **w/ LEXUS Navigation System:**  
**REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER**
4. **REMOVE INSTRUMENT CLUSTER FINISH PANEL CENTER LOWER**
5. **REMOVE AIR CONDITIONER ASSEMBLY**
6. **M/T Vehicle:**  
**REMOVE FLOWER SHIFT LEVER KNOB**
7. **REMOVE CONSOLE PANEL UPPER**
8. **REMOVE PARKING BRAKE HOLE COVER**
9. **REMOVE CONSOLE BOX**
10. **REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY**
11. **REMOVE HORN BUTTON**
12. **REMOVE STEERING WHEEL**
13. **REMOVE STEERING COLUMN LOWER COVER**
14. **REMOVE STEERING COLUMN UPPER COVER**
15. **REMOVE TURN SIGNAL SWITCH ASSEMBLY**
16. **REMOVE INSTRUMENT PANEL FINISH PANEL LOWER**
17. **REMOVE INSTRUMENT CLUSTER FINISH PANEL**
18. **REMOVE COMBINATION METER**
19. **REMOVE FRONT DOOR INNER SCUFF PLATE RH**
20. **REMOVE FRONT DOOR INNER SCUFF PLATE LH**
21. **REMOVE COWL SIDE TRIM BOARD RH**
22. **REMOVE COWL SIDE TRIM BOARD LH**
23. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**
24. **REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**
25. **REMOVE FRONT PILLAR GARNISH RH**
26. **REMOVE FRONT PILLAR GARNISH LH**
27. **DISCONNECT PASSENGER AIRBAG CONNECTOR**
28. **REMOVE INSTRUMENT PANEL ASSEMBLY**

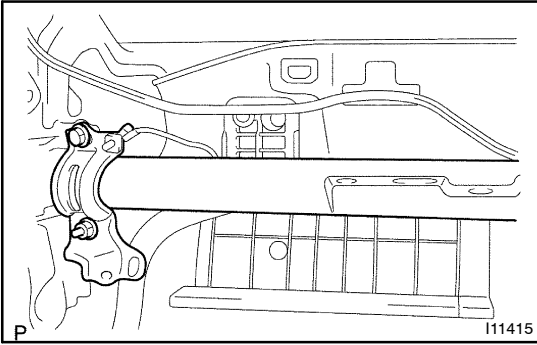

**29. REMOVE INSTRUMENT PANEL REINFORCEMENT BRACKET**

Remove the bolt and nut and pull instrument panel reinforcement.

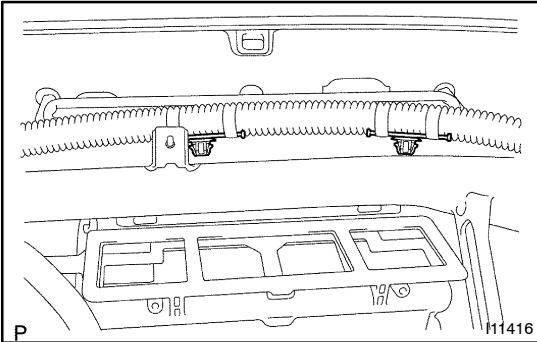

**30. REMOVE A PART OF INSTRUMENT PANEL WIRE**

Remove the 2 clips and a part of instrument panel wire.

**31. REMOVE DEFROSTER LOWER NOZZLE**

**32. REMOVE BENCH TYPE REAR SEAT CUSHION ASSEMBLY**

**33. REMOVE BENCH TYPE REAR SEAT BACK ASSEMBLY**

**34. REMOVE REAR DOOR INNER SCUFF PLATE RH**

**35. REMOVE REAR DOOR INNER SCUFF PLATE LH**

**36. REMOVE REAR DOOR OPENING TRIM WEATHER STRIP RH**

**37. REMOVE REAR DOOR OPENING TRIM WEATHER STRIP LH**

**38. REMOVE CENTER PILLAR GARNISH LOWER RH**

**39. REMOVE CENTER PILLAR GARNISH LOWER LH**

**40. REMOVE SEAT BELT ANCHOR COVER CAP**

**41. REMOVE FRONT SEAT OUTER BELT ASSEMBLY RH**

**42. REMOVE FRONT SEAT OUTER BELT ASSEMBLY LH**

**43. REMOVE CENTER PILLAR GARNISH RH**

**44. REMOVE CENTER PILLAR GARNISH LH**

**45. REMOVE ROOF SIDE INNER GARNISH RH**

**46. REMOVE ROOF SIDE INNER GARNISH LH**

**47. REMOVE ASSIST GRIP COVER**

**48. REMOVE ASSIST GRIP**

**49. REMOVE VISOR ASSEMBLY RH**

**50. REMOVE VISOR ASSEMBLY LH**

**51. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER**

**52. REMOVE INNER REAR VIEW MIRROR**

**53. REMOVE MAP LIGHT ASSEMBLY**

**54. REMOVE ROOM LIGHT ASSEMBLY**

**55. w/ Sliding Roof:**

**REMOVE SLIDING ROOF OPENING TRIM MOULDING**

**56. REMOVE VISOR HOLDER**

**57. REMOVE ROOF HEADLINING ASSEMBLY**


**58. REMOVE ANTENNA ASSEMBLY**

(a) Remove the 2 nuts and disconnect the connector.

(b) Remove the antenna assembly.

**59. REMOVE ANTENNA COED**

Remove the clamp and the antenna cord.

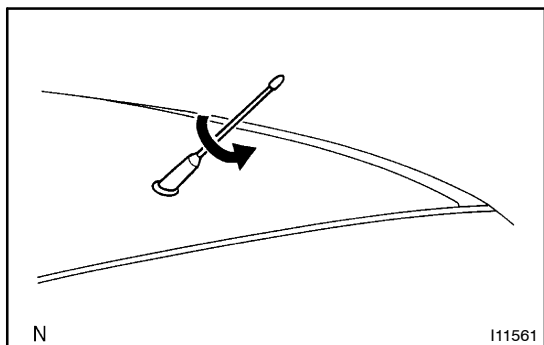**60. REMOVE ANTENNA POLE**

Turn the antenna pole counterclockwise to remove.