BO2CC-01

INSTALLATION

1. INSTALL OUTSIDE REAR VIEW MIRROR

(a) w/ Front No.2 speaker:

Install the outside rear view mirror with the bolt.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(b) w/o Front No.2 speaker:

Install the outside rear view mirror with the 3 bolts.

Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)


(c) Connect the connector.



(a) Install the front No.2 speaker with the 2 bolts.


Torque: 8.0 N·m (82 kgf·cm, 71 in.·lbf)

(b) Connect the connector.

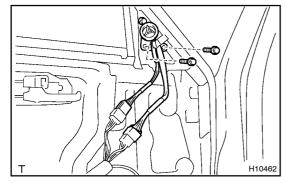


3. INSTALL DOOR TRIM

- (a) Install the door trim to the door panel.
- (b) Connect the connector, then install the courtesy light.

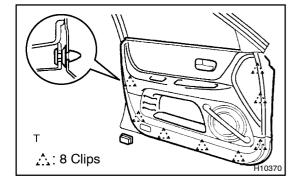

4. INSTALL LOWER FRAME BRACKET GARNISH


Install the lower frame bracket garnish to the door panel.

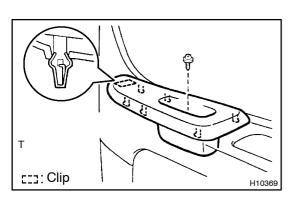

5. INSTALL FRONT ARMREST

Install the front armrest with the screw.

LEXUS IS200 (RM684E)

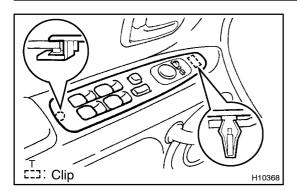

6. INSTALL POWER WINDOW SWITCH

- (a) Connect the connectors.
- (b) Install the power window switch.
- 7. INSTALL INSIDE HANDLE BEZEL
- (a) Install the inside handle bezel with the screws.
- (b) Close the screw cap.