


ADJUSTMENT


1. ADJUST LUGGAGE COMPARTMENT DOOR

- (a) Remove the 3 clips.
- (b) Open the cover and remove the hinge cover.
- (c) Employ the same manner described above to the other side.

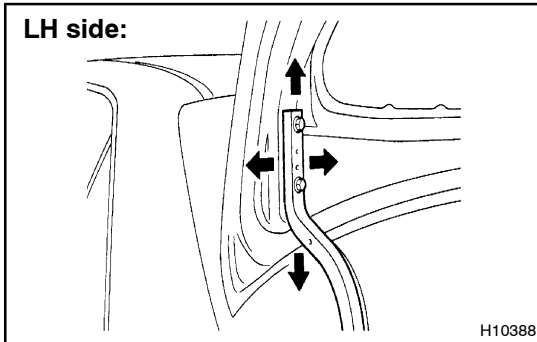

- (d) For forward / rearward and left / right adjustments loosen the bolts.
- (e) For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and the door.

Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)

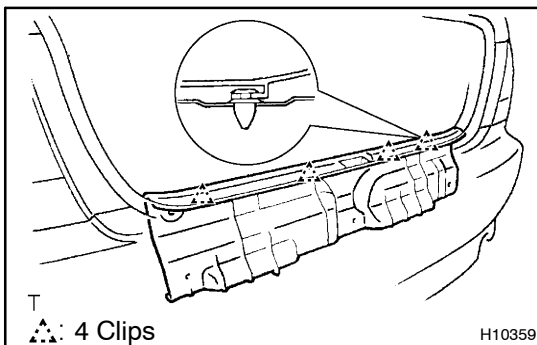


2. ADJUST DOOR LOCK STRIKER

- (a) Using a clip remover, remove the 5 clips.
- (b) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

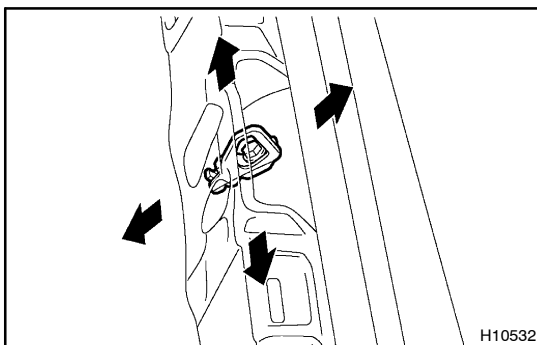

- (c) Using a hammer and brass bar, tap the striker to adjust it.
- Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)**