REASSEMBLY

Reassembly is in the reverse order of disassembly (See page BO-45).

BO0XF-01