


REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM NO.2 COVER

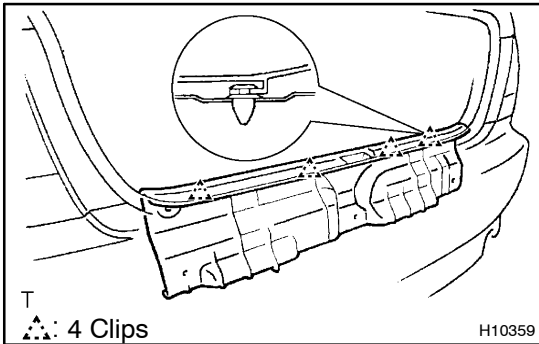


2. REMOVE LUGGAGE COMPARTMENT TRIM REAR COVER

- (a) Using a clip remover, remove the 5 clips.
- (b) Using a screw driver, remove the luggage compartment trim rear cover.

HINT:


Tape the screwdriver tip before use.

3. REMOVE LUGGAGE COMPARTMENT FLOOR HOOKS

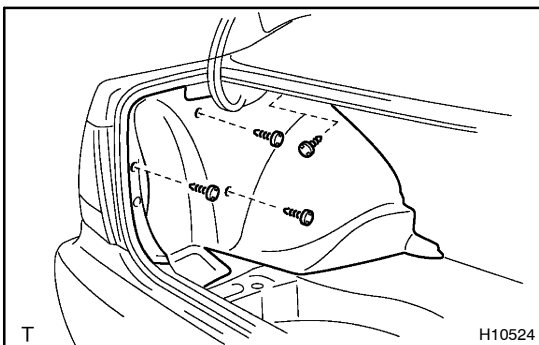


4. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH

Remove the 4 clips and luggage compartment trim side cover LH.

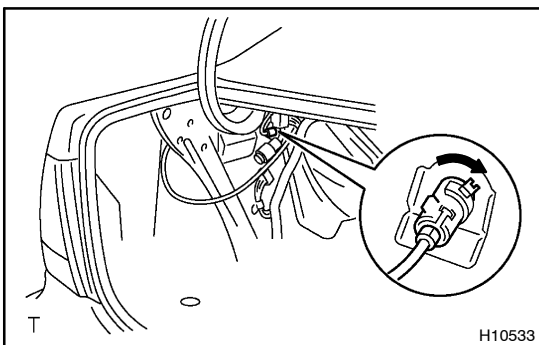


5. REMOVE FUEL LID LOCK CONTROL

- (a) Rotate the fuel lid lock right to disengage the lock, then pull it out.

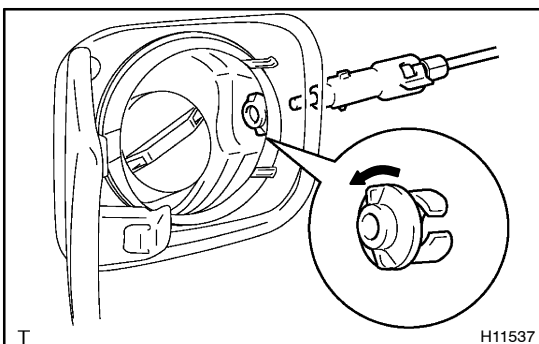

- (b) Rotate the retainer left to disengage the lock, then pull it out.

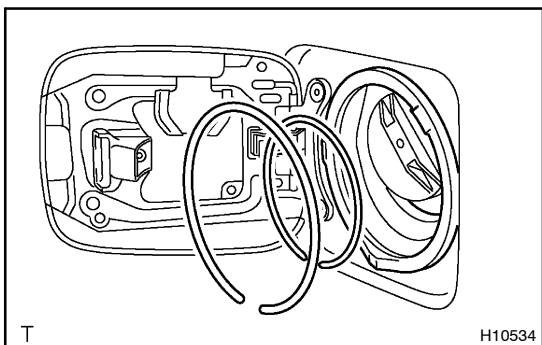
**6. REMOVE FUEL FILLER SHIELD**

- (a) Remove the 2 rings from the fuel filler shield.
- (b) Remove the fuel tank cap and shield.

CAUTION:

Always keep the tank cap closed when it is not required to be open. Keep all fire away during the operation.


- (c) Install the fuel tank cap quickly.

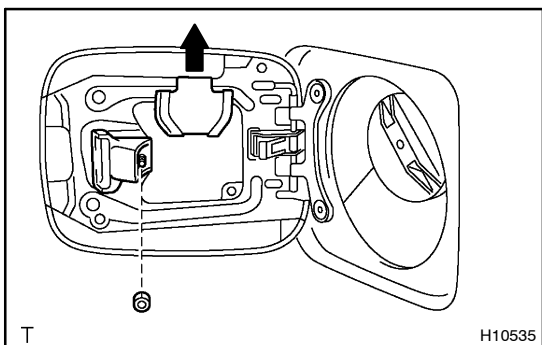**7. REMOVE FUEL TANK CAP HANGER**

Pull up the fuel tank cap hanger to remove it.

8. REMOVE FUEL FILLER OPENING LID LOCK RETAINER


Remove the nut and fuel filler opening lid lock retainer.

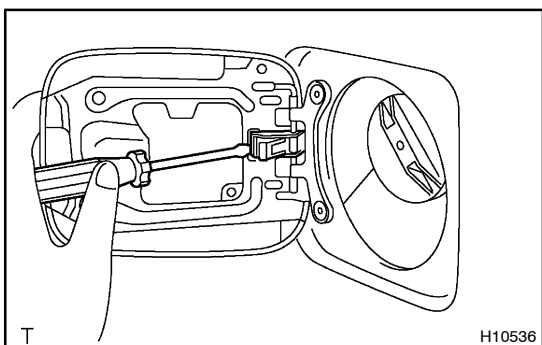**9. REMOVE FUEL LID OPENING SPRING**

Insert a screwdriver between the spring and fuel filler opening lid to remove the spring as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

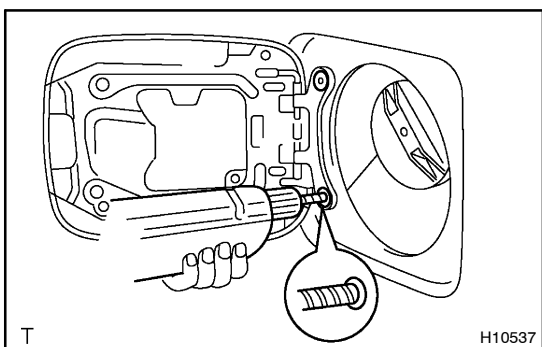**10. REMOVE FUEL FILLER OPENING LID**

- (a) Using a drill, drill out the rivet heads.
- (b) Remove the fuel filler opening lid.