



B00M1-03

SLIDING ROOF ON-VEHICLE INSPECTION

INSPECT SLIDING ROOF GLASS ALIGNMENT

- (a) Start the engine and check the operation time of the sliding roof.

Operation time:

Approx. 6 secs.

- (b) Check for abnormal noise or binding during operation.
(c) With the sliding roof fully closed, check for water leakage.
(d) Check for a difference in level between the sliding roof weatherstrip and roof panel.

Front end:

0 – 2.0 mm (0 – 0.079 in.)

0 + 1.0 mm (0 + 0.039 in.)

Side end:

0 ± 1.5 mm (0 ± 0.059 in.)

Rear end:

0 – 1.0 mm (0 – 0.039 in.)

0 + 2.0 mm (0 + 0.079 in.)