

DISASSEMBLY

1. REMOVE SIDE DEFROSTER DUCT


Remove the screw, then disconnect the side defroster duct as shown in the illustration.

2. REMOVE NO.2 SIDE DEFROSTER NOZZLE DUCT

Employ the same manner described in the above step.


3. REMOVE DEFROSTER NOZZLE ASSEMBLY

Remove the 3 screws and defroster nozzle assembly.

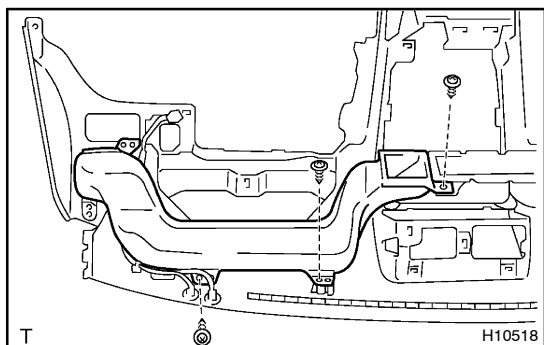


4. REMOVE NO.1 HEATER TO REGISTER DUCT

Remove the 3 screws and No.1 heater to register duct.

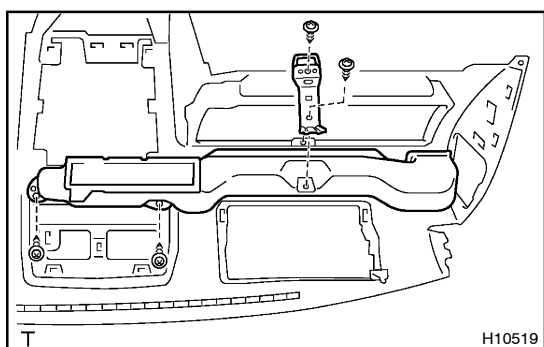

5. REMOVE NO.2 HEATER TO REGISTER DUCT

- (a) Remove the 2 screws and center bracket.
- (b) Remove the 2 screws and No.2 heater to register duct.

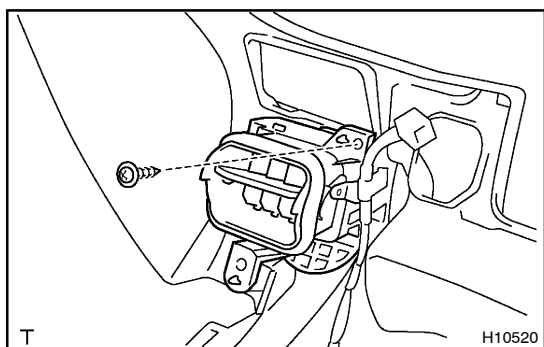


6. REMOVE NO.1 REGISTER

Remove the screw and No.1 register as shown in the illustration.

7. REMOVE NO.2 REGISTER

Employ the same manner described in the above step.

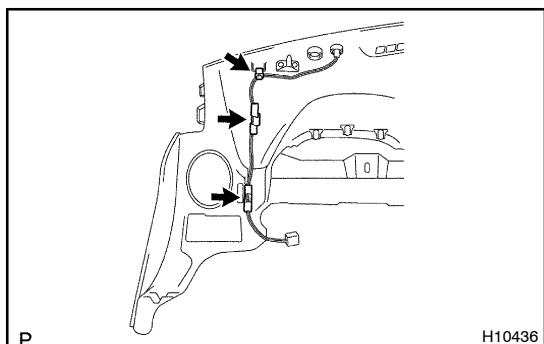


8. REMOVE NO.2 INSTRUMENT PANEL WIRE

- (a) Disconnect the connectors.
- (b) Disengage the wire harness clamps and remove the No.2 instrument panel wire.

9. REMOVE SOLAR SENSOR

10. REMOVE AUTO LIGHT CONTROL SENSOR

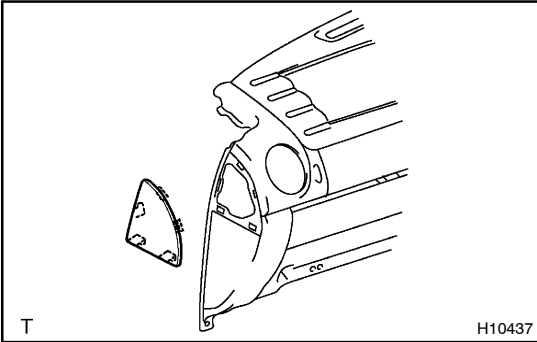**11. REMOVE INSTRUMENT SIDE PANEL**

Using a screwdriver, remove the instrument side panel.

HINT:

Tape the screwdriver tip before use.

12. REMOVE NO.1 PINS

Remove the 4 screws and No.1 pins.