REASSEMBLY

BO2CW-01

Reassembly is in the reverse order of disassembly (See page BO-101).