

PARKING BRAKE LEVER ON-VEHICLE INSPECTION


BR02V-01

1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44.1 lbf):
5 - 8 clicks**

If incorrect, adjust the parking brake.

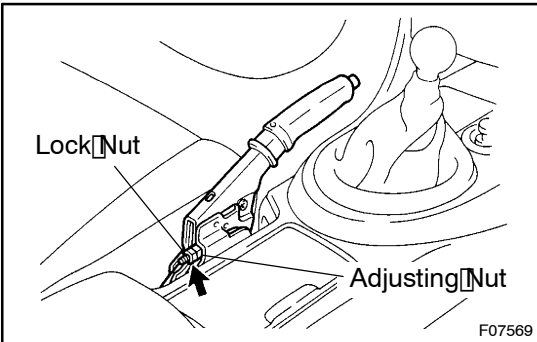

2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted.

For shoe clearance adjustment (See page BR-44).

- (a) Remove the parking brake lever hole cover.
- (b) Loosen the lock nut and the turn adjusting nut until the lever travel is correct.
- (c) Tighten the lock nut.
- (d) Install the parking brake lever hole cover.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)