


## REMOVAL

### 1. TAKE OUT FLUID WITH SYRINGE

#### NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.

### 2. DISCONNECT BRAKE FLUID LEVEL SWITCH CONNECTOR

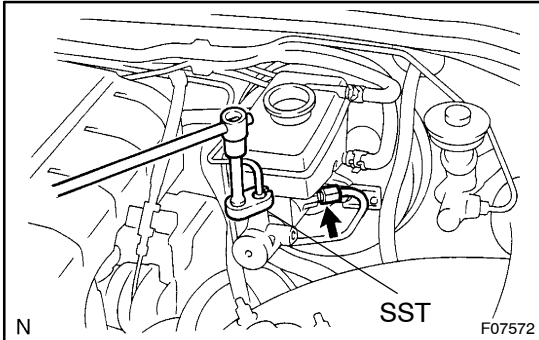


### 3. DISCONNECT BRAKE LINES

Using SST, disconnect the 2 brake lines.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

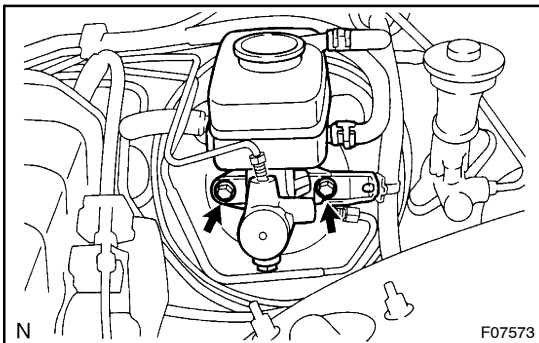

### 4. REMOVE MASTER CYLINDER

#### (a) RHD:

Remove the bolt and cable bracket.

**Torque: 10 N·m (102 kgf·cm, 7 ft·lbf)**

#### (b) Disconnect the 2 brake hoses.

(c) Remove the 2 nuts, and pull out the check valve bracket, brake hose clamp, master cylinder and gasket.

**Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)**