



## REMOVAL

### 1. REMOVE BRAKE MASTER CYLINDER

(See page BR-12)

### 2. REMOVE BRAKE BOOSTER

- (a) Remove the vacuum hose from the brake booster.
- (b) Remove the No. 1 lower pad (See page BO-93).
- (c) Remove the return spring, clip and clevis pin.
- (d) Remove the 4 booster installation nuts and clevis.
- (e) Pull out the booster and gasket.