

REMOVAL

1. DISCONNECT BRAKE LINES

Using SST, disconnect the 6 brake lines from the ABS & TRC actuator.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

2. DISCONNECT 2 BRAKE HOSES AND 2 CONNECTORS

3. REMOVE ABS & TRC ACTUATOR ASSEMBLY

(a) RHD:

Remove the engine under cover and fender liner.

(b) RHD:

Remove the bolt, 2 nuts and ABS & TRC actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

(c) LHD:

Remove the nut, 2 bolts and ABS & TRC actuator assembly.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

4. REMOVE ABS & TRC ACTUATOR

(a) Remove the 2 nuts and ABS & TRC actuator.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

(b) Remove the 2 cushion bolts and 3 cushions.