

## REMOVAL

### 1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the seat cushion and seatback.
- (b) Disconnect the speed sensor connector and pull out the sensor wire harness with the grommet.

### 2. REMOVE REAR WHEEL

**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**


### 3. REMOVE SPEED SENSOR

- (a) Remove the clamp bolt holding the sensor wire harness to the toe control link.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

- (b) Remove the clamp nut holding the sensor wire harness to the body.

**Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)**

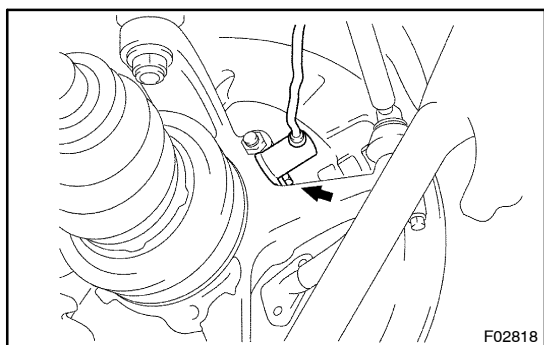

- (c) Remove the sensor installation bolt and speed sensor from the axle carrier.

**Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)**