

## INSTALLATION

Installation is in the reverse order of removal (See page BR-57).

HINT:

After installation, check speed sensor signal (See page DI-223).