



## INSTALLATION

### 1. INSTALL ALTERNATOR

- (a) Temporarily install the alternator with the pivot bolt and adjusting lock bolt.
- (b) Connect the alternator wire with the nut.
- (c) RHD:  
Install the wire clamp to the wire clip on the alternator.
- (d) Install the rubber cap.
- (e) Connect the alternator connector.

### 2. INSTALL DRIVE BELT

- (a) Install the drive belt.
- (b) Adjust the drive belt deflection. (See page CH-1)
- (c) Tighten the adjusting lock bolt and pivot bolt.

#### Torque:

**55 N·m (561 kgf·cm, 41 ft·lbf) for pivot bolt**

**13 N·m (133 kgf·cm, 10 ft·lbf) for lock bolt**

3. INSTALL NO.3 CYLINDER HEAD COVER
4. INSTALL AIR CLEANER INLET