



REMOVAL

1. DRAIN OUT FLUID WITH SYRINGE
2. REMOVE LOWER FINISH PANEL (See page BO-96)
3. DISCONNECT CLUTCH LINE UNION

Using SST, disconnect the union nut.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

4. REMOVE CLIP AND PIN
5. REMOVE 2 MOUNTING NUTS AND PULL OUT MASTER CYLINDER

Torque: 12 N·m (12 kgf·cm, 8 ft·lbf)