



## REMOVAL

### 1. DISCONNECT CLUTCH LINE

Using SST, disconnect the clutch line union. Use a container to catch the fluid.

SST 09023-00100

**Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)**

### 2. REMOVE 2 BOLTS AND PULL OUT RELEASE CYLINDER

**Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)**

