



DISASSEMBLY

1. PULL OUT PUSH ROD WITH BOOT
2. REMOVE PISTON WITH SPRING

Using compressed air, remove the piston and spring from the cylinder.