

REMOVAL

1. REMOVE TRANSMISSION FROM ENGINE


(See page MT-5)

2. REMOVE CLUTCH COVER AND DISC

- (a) Place matchmarks on the flywheel and clutch cover.
- (b) Loosen each set bolt one turn at a time until spring tension is released.
- (c) Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

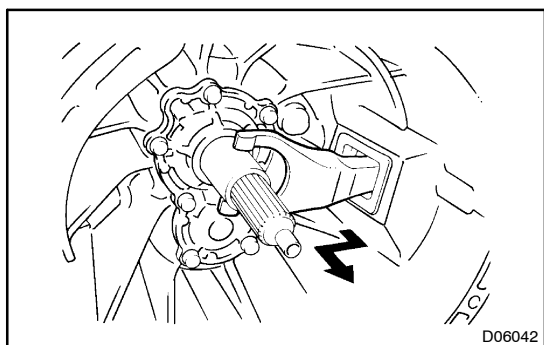

3. REMOVE BOOT, RELEASE BEARING AND FORK FROM TRANSMISSION

Remove the boot and release bearing together with the fork and then separate them.