


## INSTALLATION

### 1. INSTALL ELECTRIC COOLING FAN TO RADIATOR

- (a) Install the electric cooling fan with the 6 bolts.  
**Torque: 5.0 N·m (50 kgf·cm, 44 in·lbf)**
- (b) Connect the radiator reservoir hose to the radiator.

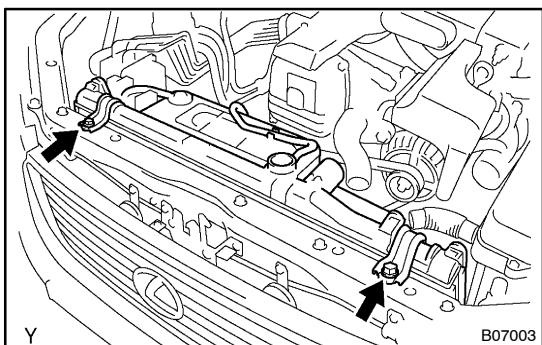

### 2. INSTALL RADIATOR AND ELECTRIC COOLING FAN ASSEMBLY

- (a) Install the 2 lower radiator supports to the radiator.
  - (b) Attach the 2 lower radiator supports on the radiator to the body bracket.
  - (c) Install the radiator and electric cooling fan assembly with the 2 upper radiator supports and 2 bolts.  
**Torque: 15.2 N·m (155 kgf·cm, 11 ft·lbf)**
  - (d) Connect the wire for the electric cooling fan to clamps on the electric cooling fan.
  - (e) Connect the 2 electric cooling fan connectors.
  - (f) Connect the water temperature switch connector for the electric cooling fan.
  - (g) A/T:  
Connect the 2 oil cooler hoses to the radiator.
  - (h) Connect the lower radiator hose to the radiator.
  - (i) Connect the upper radiator hose to the radiator.
  - (j) Connect the engine ECU outlet duct to the radiator.
- ### 3. INSTALL AIR CLEANER INLET
- ### 4. FILL WITH ENGINE COOLANT (See page CO-2)
- ### 5. START ENGINE AND CHECK FOR ENGINE COOLANT AND A/T FLUID LEAKS
- ### 6. INSTALL NO.1 ENGINE UNDER COVER