



WATER TEMPERATURE SWITCH INSPECTION

CO0AJ-03

1. REMOVE NO.1 ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT

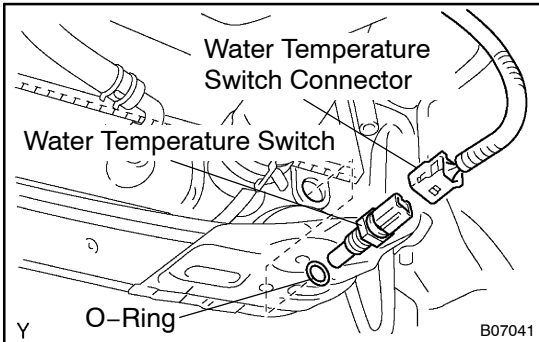

3. REMOVE WATER TEMPERATURE SWITCH
 - (a) Disconnect the connector.
 - (b) Remove the water temperature switch.
 - (c) Remove the O-ring from the water temperature switch.

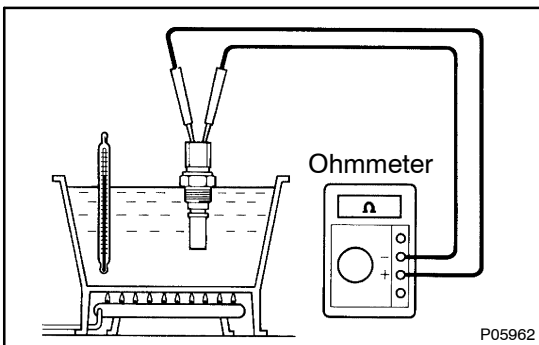

4. INSPECT WATER TEMPERATURE SWITCH
 - (a) Using an ohmmeter, check that there is continuity between the terminals when the coolant temperature is above 93°C (199°F).
If there is no continuity, replace the switch.
 - (b) Using an ohmmeter, check that there is no continuity between the terminals when the coolant temperature is below 83°C (181°F).

If there is continuity, replace the switch.

5. REINSTALL WATER TEMPERATURE SWITCH
 - (a) Install a new O-ring to the water temperature switch.
 - (b) Install the water temperature switch.
 - (c) Connect the connector.
6. REINSTALL NO.1 ENGINE UNDER COVER
7. REFILL WITH ENGINE COOLANT
8. START ENGINE AND CHECK FOR COOLANT LEAK