

INSPECTION PROCEDURE

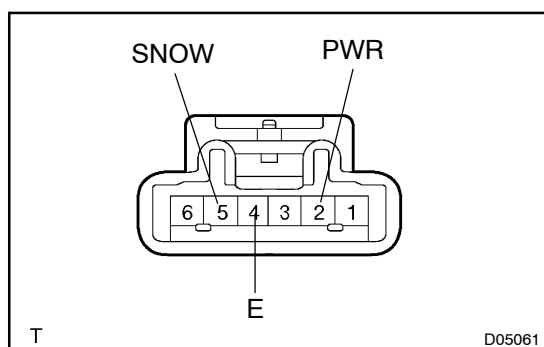
1 Check output voltage of A/C control assembly (See page DI-672).

NG

Check and replace the Engine and ECT ECU and A/C control assembly.

OK

2 Check Engine and ECT ECU pattern select switch.

**PREPARATION:**

Disconnect the pattern select switch connector.

CHECK:

Check continuity between terminals 2 and 4 (PWR), 4 and 5 (SNOW) of pattern select switch connector when the select switch is set to PWR, NORM and SNOW positions.

OK:

Switch position	Tester connection	Specified condition
PWR	2 - 4	Continuity
NORM	2 - 4, 4 - 5	No continuity
SNOW	4 - 5	Continuity

NG

Replace the pattern select switch.

OK

3 Repair or replace harness and connector between A/C control assembly and ECT pattern select switch, ECT pattern select switch and body earth.