


TERMINALS OF ECU

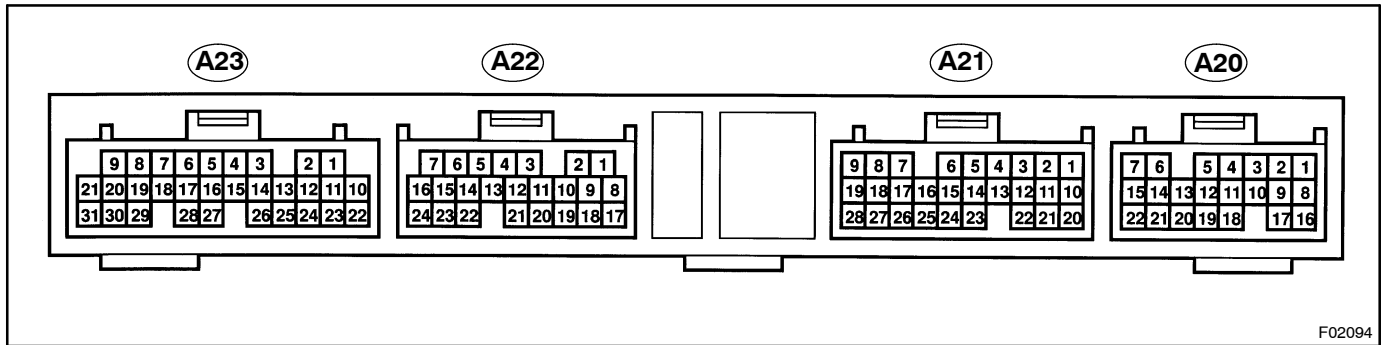

F02094

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
SPC (A23 - 4) - GND (A22 - 8, 17, A23 - 31)	LG ↔ W-B	IG switch ON, TRC OFF indicator light OFF	10 - 14
SFLR (A23 - 7) - GND (A22 - 8, 17, A23 - 31)	W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRH (A23 - 8) - GND (A22 - 8, 17, A23 - 31)	R-W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRRR (A23 - 9) - GND (A22 - 8, 17, A23 - 31)	W-L ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
FR+ (A23 - 14) - FR- (A23 - 13)	O ↔ B	IG switch ON, slowly turn right front wheel	AC generation
FL+ (A23 - 16) - FL- (A23 - 15)	LG ↔ V	IG switch ON, slowly turn left front wheel	AC generation
SR (A23 - 19) - R+ (A23 - 1)	L-R ↔ L-B	IG switch ON, ABS warning light OFF	Below 1.5
SFLH (A23 - 21) - GND (A22 - 8, 17, A23 - 31)	W-G ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
MT (A23 - 28) - GND (A22 - 8, 17, A23 - 31)	L-Y ↔ W-B	IG switch ON (Motor relay is OFF)	Below 1.5
MR (A23 - 29) - GND (A22 - 8, 17, A23 - 31)	R-Y ↔ W-B	IG switch ON, ABS motor stops	10 - 14
Tc (A22 - 3) - GND (A22 - 8, 17, A23 - 31)	R-W ↔ W-B	IG switch ON	10 - 14
Ts (A22 - 4) - GND (A22 - 8, 17, A23 - 31)	W-L ↔ W-B	IG switch ON	10 - 14
IG1 (A22 - 6) - GND (A22 - 8, 17, A23 - 31)	B-R ↔ W-B	IG switch ON	10 - 14
NEO (A22 - 7) - GND (A22 - 8, 17, A23 - 31)	G ↔ W-B	Engine idling	Pulse generation
RR+ (A22 - 11) - RR- (A22 - 12)	W ↔ B	IG switch ON, slowly turn right rear wheel	AC generation
ENG+ (A22 - 14) - ENG- (A22 - 22)	L ↔ B	IG switch ON, Engine idling	Pulse generation
RL+ (A22 - 19) - RL- (A22 - 20)	R ↔ L	IG switch ON, slowly turn left rear wheel	AC generation
TRC+ (A22 - 24) - TRC- (A22 - 16)	R ↔ W	IG switch ON, Engine idling	Pulse generation
LBL+ (A21 - 1) - GND (A22 - 8, 17, A23 - 31)	Y-R ↔ W-B	IG switch ON, fluid in master cylinder reservoir above MIN level and parking brake switch is OFF (Brake warning light is OFF)	10 - 14

WA (A21 - 5) - GND (A22 - 8, 17, A23 - 31)	W-G ↔ W-B	IG switch ON, ABS warning light ON	Below 2.0
		IG switch ON, ABS warning light OFF	10 - 14
IND (A21 - 6) - GND (A22 - 8, 17, A23 - 31)	LG-B ↔ W-B	IG switch ON, SLIP indicator light ON	Below 2.0
		IG switch ON, SLIP indicator light OFF	10 - 14
STP (A21 - 7) - GND (A22 - 8, 17, A23 - 31)	G-W ↔ W-B	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 - 14
LBL- (A21 - 11) - GND (A22 - 8, 17, A23 - 31)	Y-R ↔ W-B	IG switch ON, fluid in master cylinder reservoir above MIN level	About 4 - 8
WT (A21 - 13) - GND (A22 - 8, 17, A23 - 31)	LG ↔ W-B	IG switch ON, TRC OFF indicator light ON	Below 2.0
		IG switch ON, TRC OFF indicator light OFF	10 - 14
SP1 (A21 - 16) - GND (A22 - 8, 17, A23 - 31)	R-B ↔ W-B	Vehicle driving at about 20 km/h (12 mph)	Pulse generation
D/G (A21 - 25) - GND (A22 - 8, 17, A23 - 31)	W ↔ W-B	IG switch ON	10 - 14
CSW (A21 - 26) - GND (A22 - 8, 17, A23 - 31)	LG-R ↔ W-B	IG switch ON, TRC cut switch pushed in	Below 1.5
		IG switch ON, TRC cut switch released	10 - 14
SRLR (A20 - 1) - GND (A22 - 8, 17, A23 - 31)	R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
AST (A20 - 6) - GND (A22 - 8, 17, A23 - 31)	Y ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRLH (A20 - 7) - GND (A22 - 8, 17, A23 - 31)	G-W ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SFRR (A20 - 8) - GND (A22 - 8, 17, A23 - 31)	G ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SRC (A20 - 15) - GND (A22 - 8, 17, A23 - 31)	L-W ↔ W-B	IG switch ON, TRC OFF Indicator light OFF	10 - 14
SFRH (A20 - 16) - GND (A22 - 8, 17, A23 - 31)	W-R ↔ W-B	IG switch ON, ABS warning light OFF	10 - 14
SMC (A20 - 22) - GND (A22 - 8, 17, A23 - 31)	P ↔ W-B	IG switch ON, TRC OFF indicator light OFF	10 - 14