

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See Page
ABS does not operate	<p>Only when 1. to 4. are all normal and the problem is still occurring, replace the ABS & TRC ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC reconfirming that the normal code is output. 2. IG power source circuit 3. Speed sensor circuit 4. Check the ABS & TRC actuator with a checker or hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-284). 	<p>DI-223</p> <p>DI-259</p> <p>DI-234</p> <p>BR-45</p>
ABS does not operate efficiently	<p>Only when 1. to 4. are all normal and the problem is still occurring, replace the ABS & TRC ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC reconfirming that the normal code is output 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the ABS & TRC actuator with a checker or hand-held tester. If abnormal, check the hydraulic circuit for leakage (See page DI-284). 	<p>DI-223</p> <p>DI-234</p> <p>DI-263</p> <p>BR-45</p>
ABS warning light abnormal	<ol style="list-style-type: none"> 1. ABS warning light circuit 2. ABS & TRC ECU 	<p>DI-270</p> <p>DI-268</p>
DTC check cannot be done	<p>Only when 1. and 2. are all normal and the problem is still occurring, replace the ABS & TRC ECU.</p> <ol style="list-style-type: none"> 1. ABS warning light circuit 2. TRC OFF indicator light circuit 3. Tc terminal circuit 	<p>DI-270</p> <p>DI-275</p> <p>DI-280</p>
Speed sensor signal check cannot be done	<ol style="list-style-type: none"> 1. Tc terminal circuit 2. ABS & TRC ECU 	<p>DI-282</p> <p>DI-268</p>
TRC does not operate	<p>Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & TRC ECU.</p> <ol style="list-style-type: none"> 1. Check the DTC, reconfirming that the normal code is output. 2. IG power source circuit 3. Check the hydraulic circuit for leakage. 4. Speed sensor circuit 	<p>DI-223</p> <p>DI-259</p> <p>BR-45</p> <p>DI-234</p>
SLIP indicator light abnormal	SLIP indicator light circuit	DI-278
TRC OFF indicator light abnormal	<p>Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the ABS & TRC ECU.</p> <ol style="list-style-type: none"> 1. TRC OFF indicator light circuit 2. TRC cut switch circuit 	<p>DI-275</p> <p>DI-275</p>