

CIRCUIT INSPECTION

DTC	C1201 51	Engine Control System Malfunction
------------	-----------------	--

CIRCUIT DESCRIPTION

If any trouble occurs in the engine control system, the ECU prohibits TRC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 51	Conditions 1. and 2. continue for 5 sec.: 1. Engine speed: 500 rpm or more. 2. A trouble signal in the engine control system is input.	<ul style="list-style-type: none"> Engine control system

INSPECTION PROCEDURE

1	Check the DTC for the engine (See page DI-4)
---	--

*1

Repair engine control system according to the code output.

*2

Check for engine and ECT ECU connected to malfunction indicator light.

*1: Output NG code

*2: Malfunction indicator light remains ON