

<b>DTC</b>	<b>C1202 / 52</b>	<b>Brake Fluid Warning Switch Circuit</b>
------------	-------------------	---

### CIRCUIT DESCRIPTION


The brake fluid level warning switch sends the appropriate signal to the ECU when the brake fluid level drops.

HINT:

Pull the parking brake lever also turns on the brake warning light but does not diagnose DTC No. C1202 / 52.

DTC No.	DTC Detecting Condition	Trouble Area
C1202 / 52	When any of the following 1. or 2. is detected: 1. Low fluid level condition in the brake master cylinder reservoir tank continues for 10 sec. or more. 2. With ECU terminal IG1 voltage is 9.5 V to 17.2 V and open circuit for the brake fluid level warning switch circuit continues for 2 sec. or more.	<ul style="list-style-type: none"> <li>• Brake fluid level</li> <li>• Brake fluid level warning switch</li> <li>• Brake fluid level warning switch circuit</li> <li>• ABS &amp; TRC ECU</li> </ul>

### WIRING DIAGRAM

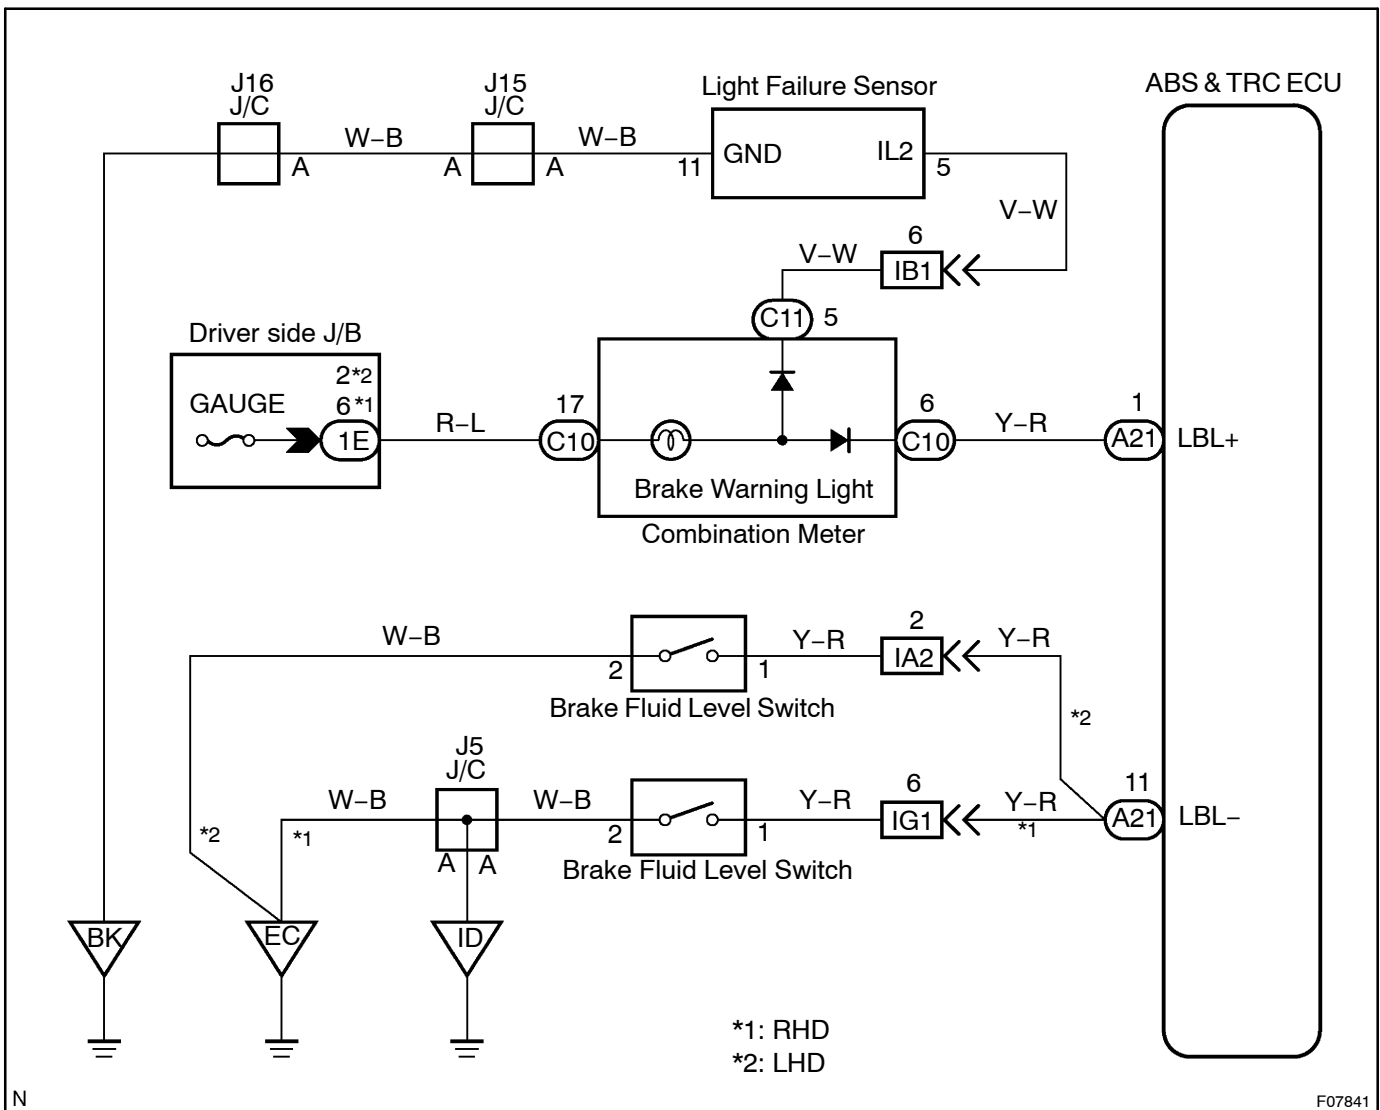

**INSPECTION PROCEDURE****1** Check brake fluid level.**CHECK:**

Check the amount of fluid in the brake reservoir.

**NG**

Check and repair brake fluid leakage and add fluid.

**OK****2** Check brake fluid level warning switch (See page BE-83).**NG**

Replace brake fluid level warning switch.

**OK****3** Check for open circuit in all the harness and components connected to brake fluid level warning light (See page IN-32).**NG**

Repair or replace harness or connector.

**OK**

Check and replace ABS &amp; TRC ECU.