


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected with the DTC check. Connecting terminals Ts and E₁ of the check connector or Ts and CG of the DLC3 starts the check.

WIRING DIAGRAM

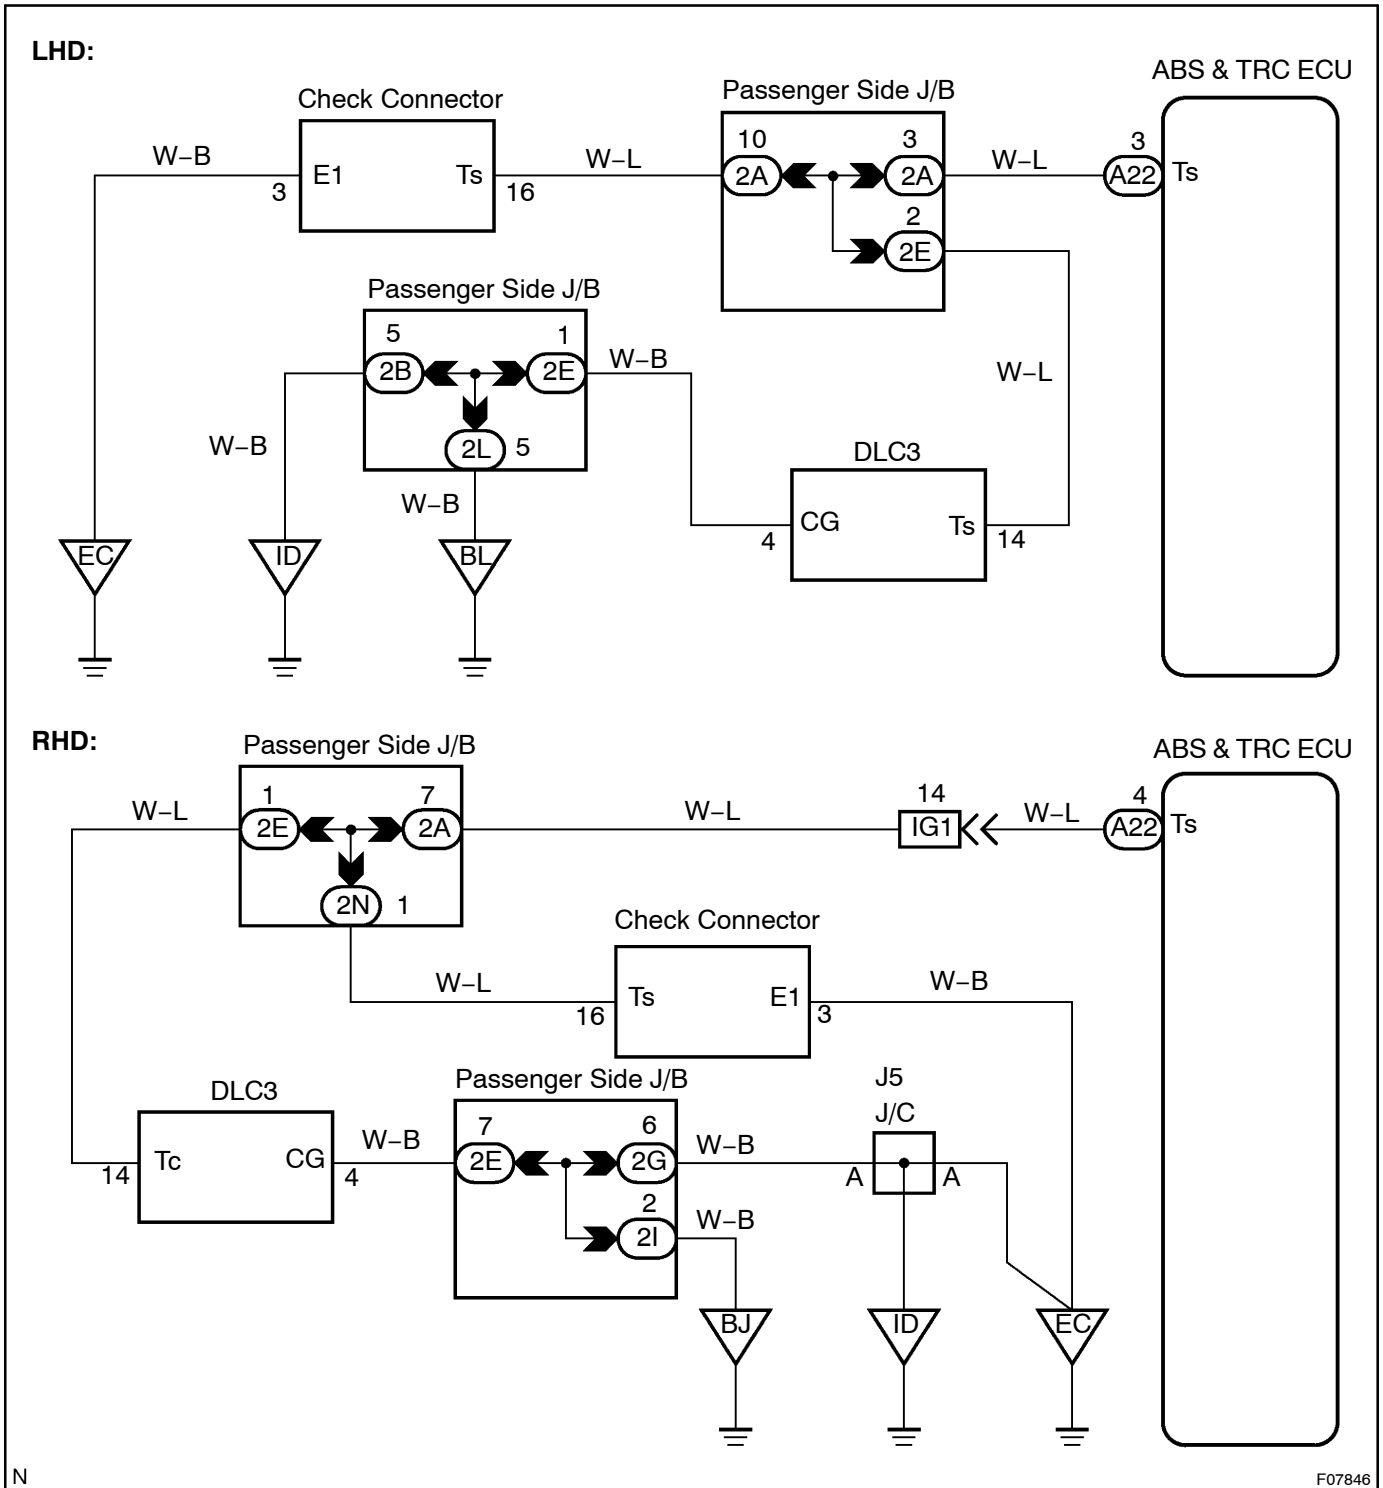


N

F07846

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E₁ of check connector or Ts and CG of DLC3.

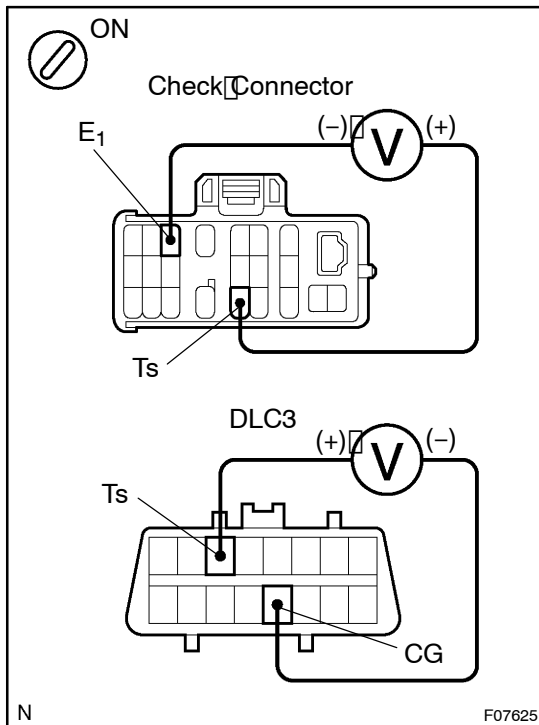**CHECK:**

- (a) Turn the ignition switch ON.
 (b) Measure voltage between terminals Ts and E₁ of check connector or Ts and CG of DLC3.

OK:

Voltage: 10 - 14 V

OK

If ABS warning light does not blink even after Ts and E₁ or Ts and CG have been connected, the ECU may be defective.

NG

- 2 Check for open and short circuit in harness and connector between ABS & TRC ECU and check connector or DLC3, check connector or DLC3 and body ground (See page IN-32).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & TRC ECU.