



PARTS LOCATION

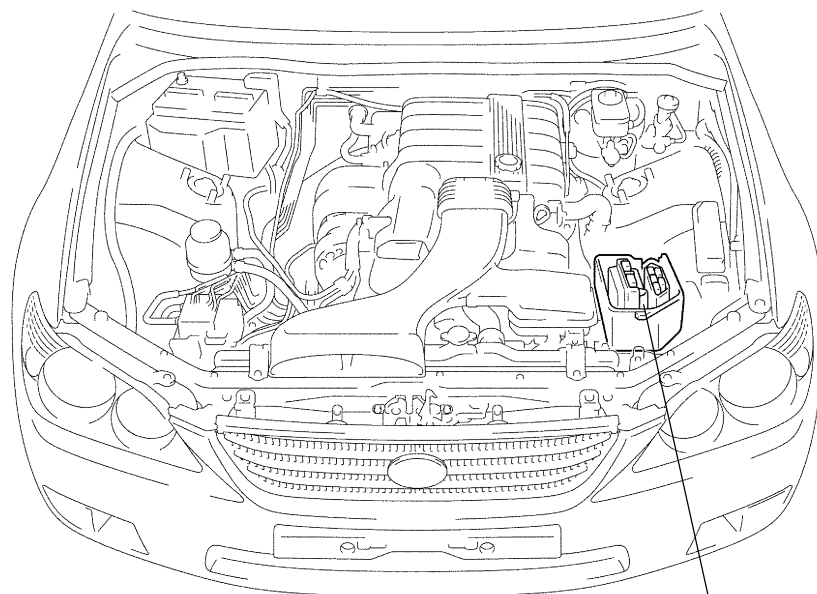

Engine and ECT ECU

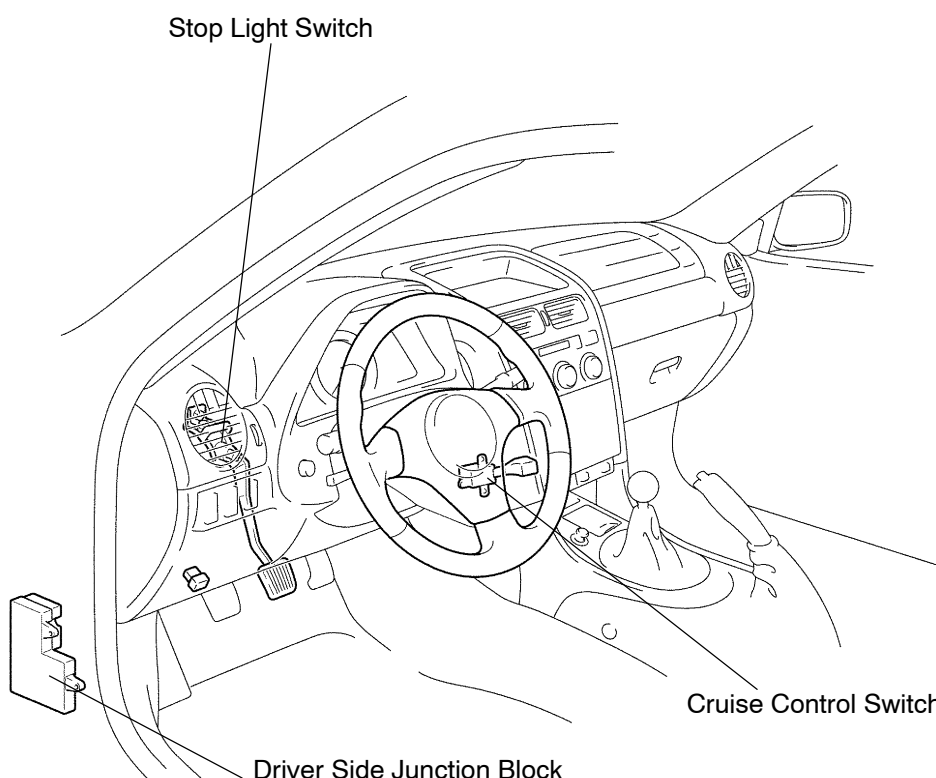

Stop Light Switch

Cruise Control Switch

Driver Side Junction Block

- IGN Fuse
- STOP Fuse

P

I10856