



Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Engine and ECT ECU.

WIRING DIAGRAM

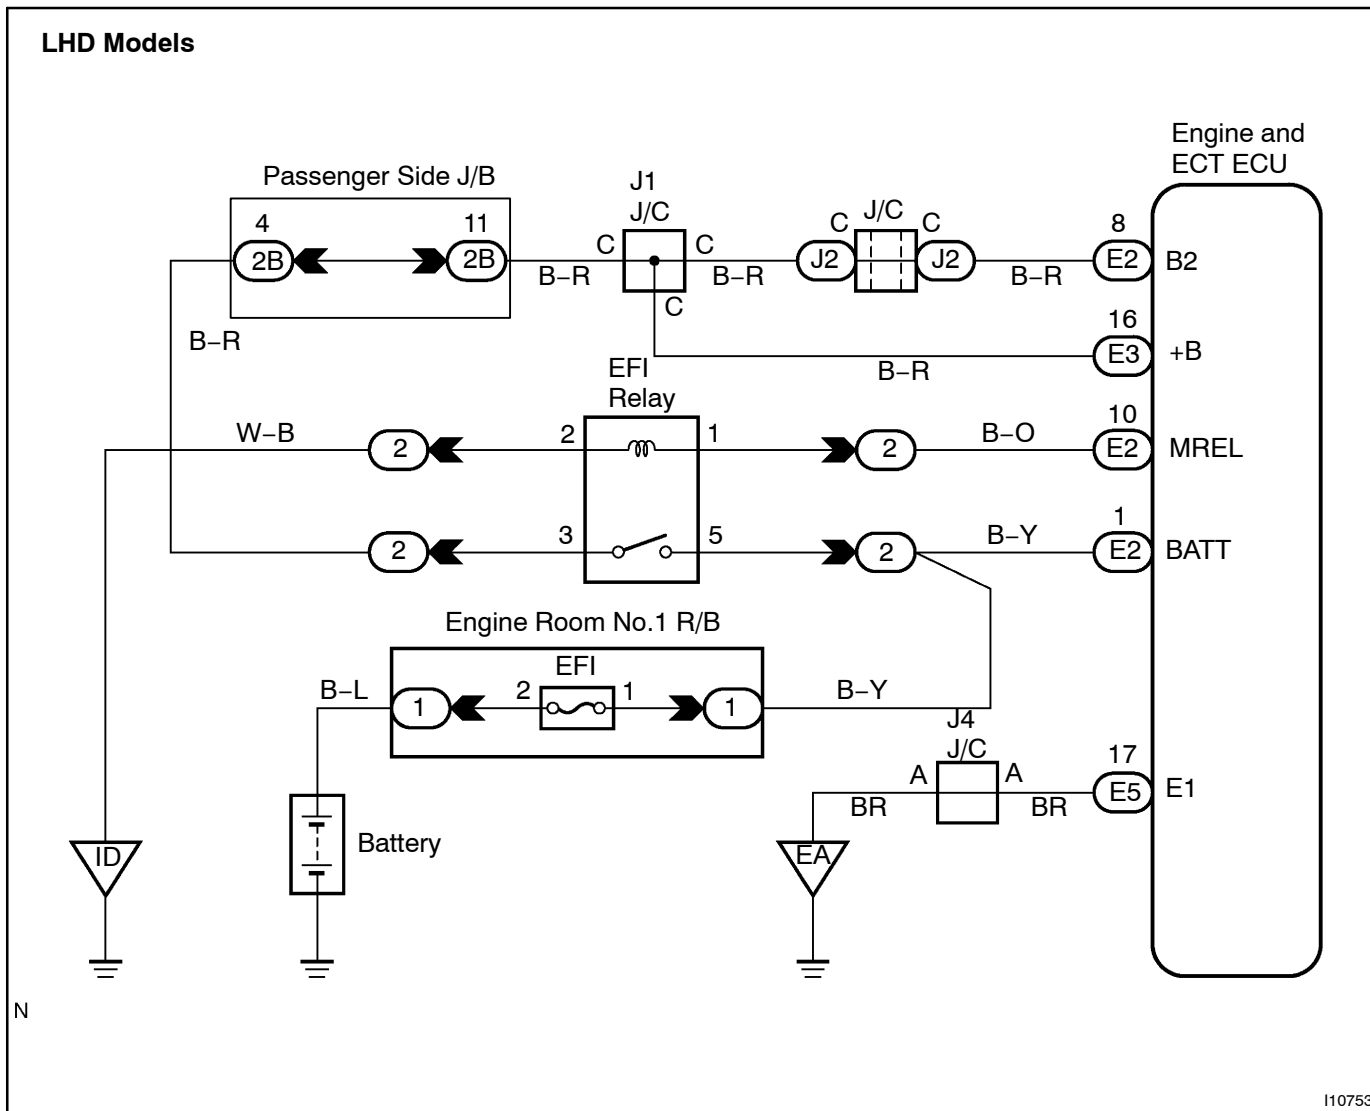

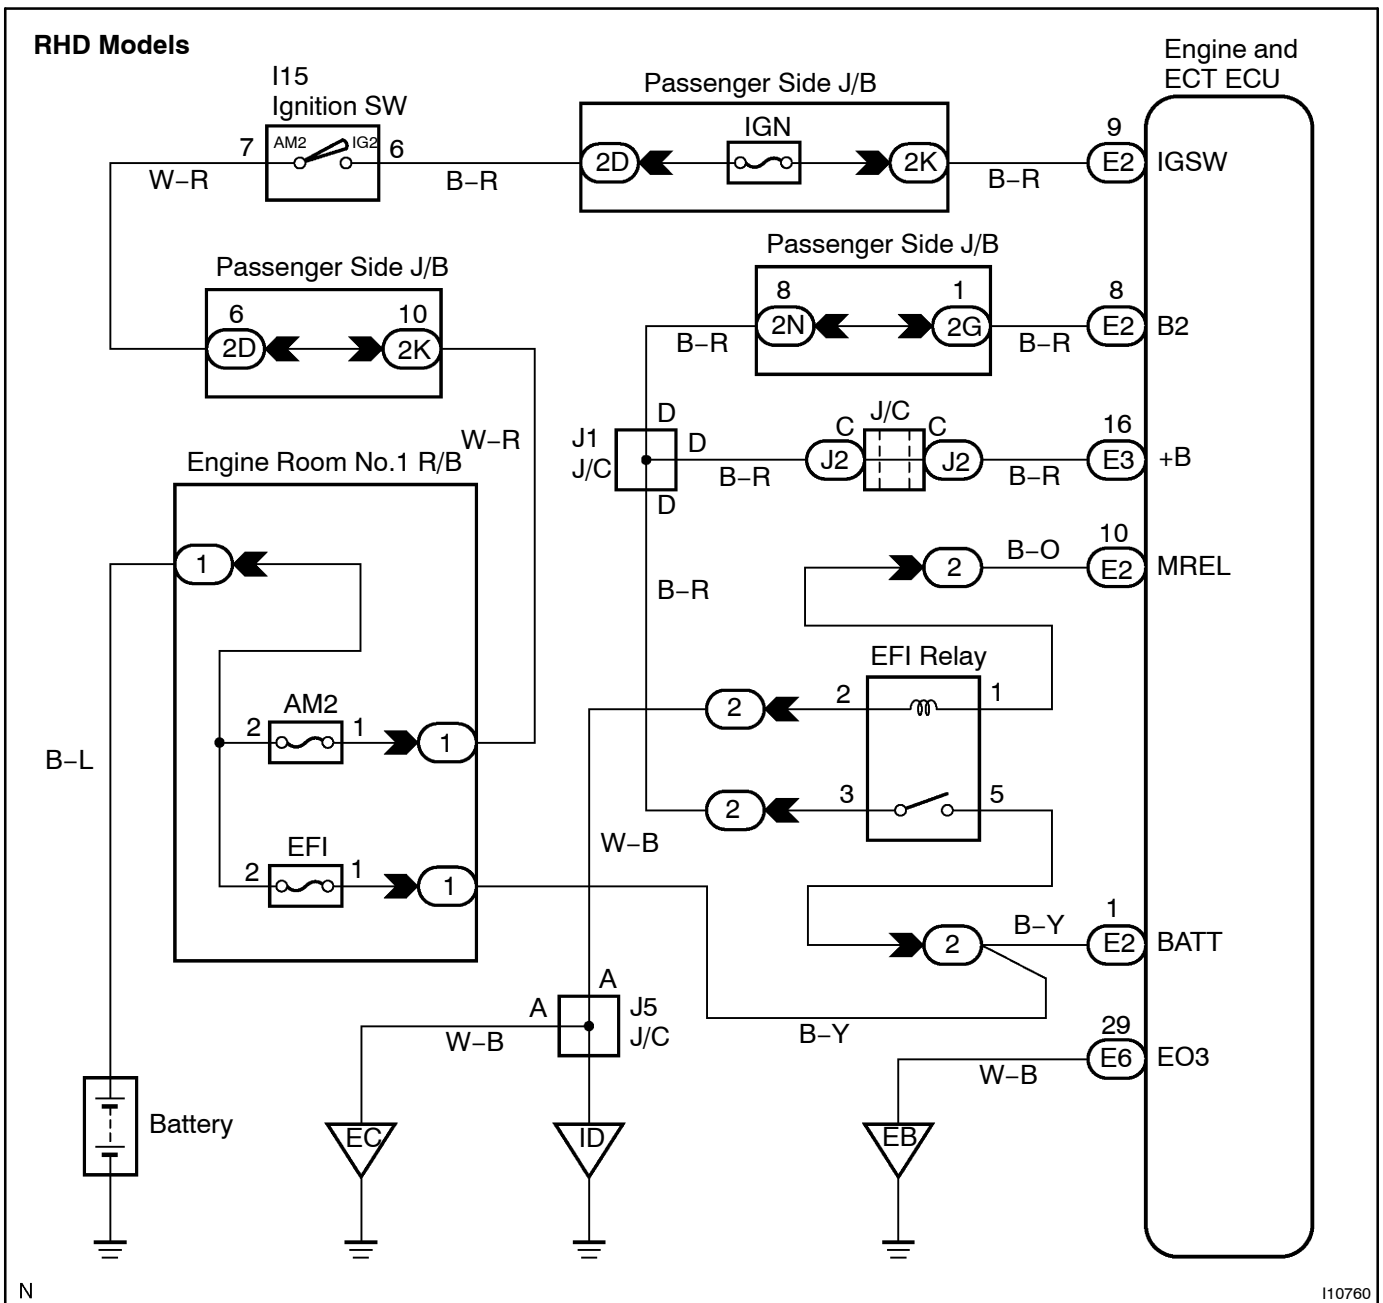

N

I10760

INSPECTION PROCEDURE**1 Check IGN and EFI fuse.****CHECK:**

Check continuity of IGN and EFI fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals GSW, BATT and GND of Engine and ECT ECU connector (See page N-32).**PREPARATION:**

(a) Turn ignition switch OFF.

(b) Disconnect the Engine and ECT ECU connector.

CHECK:

Measure voltage between terminals GSW, BATT and GND

OK:

Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-487).

NG

3 Check wireharness and connector between Engine and ECT ECU and body ground (See page N-32).

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between Engine and ECT ECU and battery (See page N-32).