

PROBLEM SYMPTOMS TABLE**GAUGE:**

Symptom	Suspect Area	See page
Speedometer does not operate or operates abnormally.	1. Speedometer 2. Speed Sensor Circuit	DI-533 DI-541
Tachometer does not operate or operates abnormally.	1. Tachometer 2. Igniter Signal Circuit	DI-534 DI-543
Fuel Gauge does not operate or operates abnormally.	1. Fuel Receiver Gauge 2. Fuel Sender Gauge 3. Wire Harness 4. Combination Meter 5. Body ECU	DI-535 BE-83 - BE-77 DI-549
Water Temperature Gauge does not operate.	1. Water Temperature Receiver Gauge 2. Water Temperature Sender Gauge 3. Wire Harness 4. Combination Meter 5. Engine and ECT ECU	DI-537 BE-83 - BE-77 DI-1

INDICATOR LIGHT AND WARNING LIGHT:

Symptom	Suspect Area	See page
Shift indicator light does not light up.	1. Bulb circuit 2. A/T shift indicator light switch 3. Transmission control switch 4. Engine and ECT ECU	DI-545 DI-217 DI-1
Open door warning light does not light up.	1. Bulb circuit 2. Door courtesy switch 3. Body ECU	DI-545 BE-57 DI-549
Driver seat belt warning light does not light up.	1. Bulb Circuit 2. Driver Buckle Switch Circuit 3. Meter Circuit Plate 4. Wire Harness 5. Body ECU	DI-545 BE-83 BE-77 - DI-549
Low oil pressure warning light does not light up.	1. Bulb Circuit 2. Low oil pressure warning switch 3. Engine and ECT ECU	DI-545 BE-83 DI-1
Discharge warning light does not light up.	1. Bulb circuit 2. Alternator 3. Engine and ECT ECU	DI-545 CH-9 DI-1
Brake warning light does not light up.	1. Bulb circuit 2. Parking brake switch 3. Brake fluid level warning switch 4. Combination meter 5. A/C ECU	DI-545 BE-83 BE-83 BE-77 DI-667
CRUISE MAIN indicator light does not light up.	1. Bulb circuit 2. Cruise control switch 3. Combination meter 4. A/C ECU 5. Engine and ECT ECU	DI-545 DI-498 BE-77 DI-667 DI-1
ECT SNOW indicator light does not light up.	1. Bulb circuit 2. ECT pattern indicator signal 3. Combination meter 4. A/C ECU 5. Engine and ECT ECU	DI-545 DI-212 BE-77 DI-667 DI-1

ECT/PWR indicator light does not light up.	<ol style="list-style-type: none"> 1. Bulb circuit 2. ECT pattern indicator signal 3. Combination meter 4. Engine and ECT ECU 	<p style="margin: 0;">DI-545</p> <p style="margin: 0;">DI-212</p> <p style="margin: 0;">BE-77</p> <p style="margin: 0;">DI-1</p>
Engine oil level warning light does not light up.	<ol style="list-style-type: none"> 1. Bulb circuit 2. Engine oil level warning sensor 3. Combination meter 	<p style="margin: 0;">DI-545</p> <p style="margin: 0;">BE-83</p> <p style="margin: 0;">BE-77</p>
Any of indicator lights does not light up.	<ol style="list-style-type: none"> 1. Bulb circuit 2. Combination meter ECU power source circuit 3. Combination meter 	<p style="margin: 0;">DI-545</p> <p style="margin: 0;">DI-547</p> <p style="margin: 0;">BE-77</p>