

## Bulb Circuit

### INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

#### 1 Perform active test.

#### PREPARATION:

- Connect the LEXUS hand-held tester to the DLC3.
- Turn ignition switch ON and LEXUS hand-held tester main switch ON.
- Select the ACTIVE TEST mode on the LEXUS hand-held tester.

#### CHECK:

Check that light turns ON or OFF as the LEXUS hand-held tester directs.

HINT:

All lights flush except shift indicator.

#### OK:


The light operates normally.

OK

Proceed to next circuit inspection shown in problem symptoms table (See page DI-531).

NG

#### 2 Check bulb.

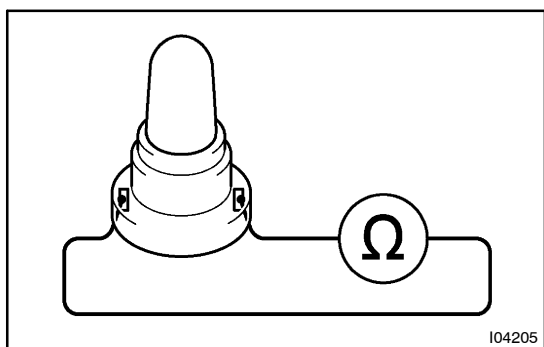

#### CHECK:

Apply the tester as shown to test for continuity.

#### OK:

Continuity

NG

Replace bulb.

OK

3 □ Check circuit plate (See page BE-83).

NG

Replace circuit plate.

OK

Check and replace combination meter (See page BE-77).