

**PROBLEM SYMPTOMS TABLE****LIGHT CONTROL:**

Symptom	Suspect Area	See page
Auto turn-off does not operate	1. Door courtesy switch circuit (Driver side) 2. Ignition switch 3. Body ECU 4. Theft deterrent ECU	DI-583 DI-558 - -

**DOOR LOCK CONTROL:**

Symptom	Suspect Area	See page
Lock or unlock cannot be operated with door lock control S/W.	1. Door lock control switch circuit 2. Body ECU 3. Power window master switch	DI-598 - -
Door key linked function does not operate.	1. Door key lock and unlock switch circuit 2. Body ECU 3. Power window master switch	DI-598 - -
Key confinement prevention function does not operate.	1. Key unlock switch circuit 2. Body ECU 3. Power window master switch	DI-575 - -

**WIRELESS DOOR LOCK CONTROL:**

Symptom	Suspect Area	See page
All function of wireless door lock control system do not operate.	1. Transmitter 2. Key unlock warning switch circuit 3. Wireless door lock ECU 4. Body ECU	BE-132 DI-575 BE-132 -
Lock (or unlock) function does not operate.	1. Door key lock and unlock switch circuit 2. Door unlock detection switch circuit 3. Body ECU	DI-598 DI-595 -
Automatic lock function operates even if any door is opened within 30 seconds after all doors are unlocked by wireless door lock control system .	1. Door courtesy switch circuit 2. Body ECU	DI-583 -

**OTHERS:**

Symptom	Suspect Area	See page
Does not operate the illuminated entry	1. Illumination circuit 2. Body ECU	DI-564 -
Key remainder system does not operate.	1. Key unlock warning switch circuit 2. Body ECU	DI-575 -
Seat belt warning does not operate.	1. Driver buckle switch circuit 2. Body ECU 3. Combination meter	DI-578 - BE-2