


CIRCUIT INSPECTION

Power source circuit


CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

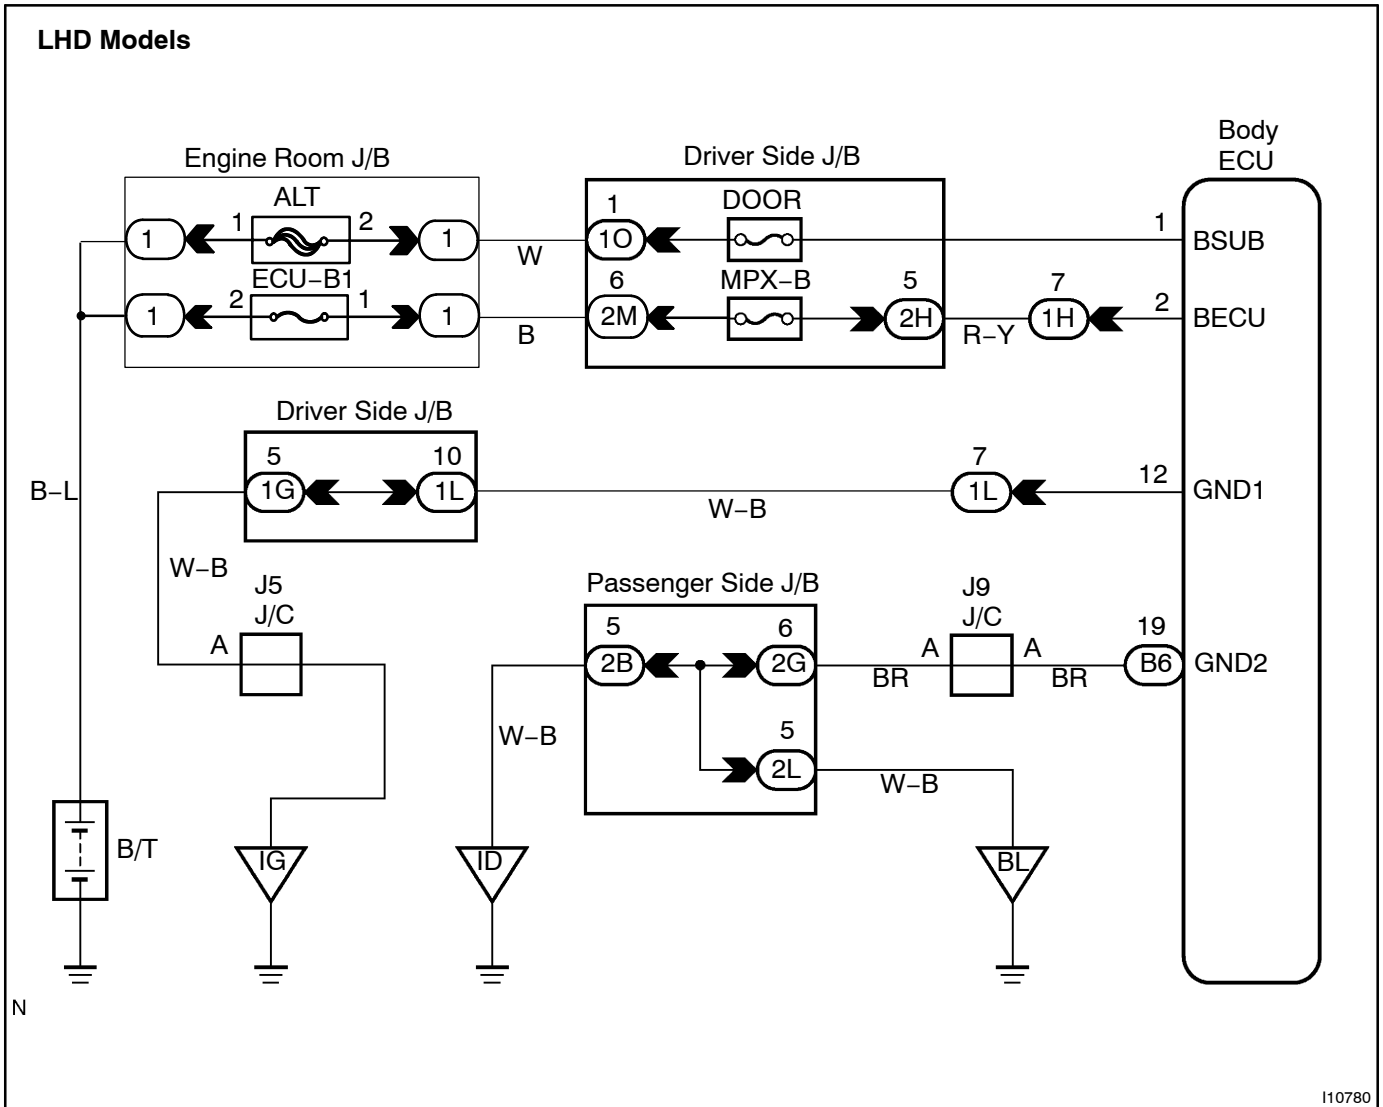

I10780

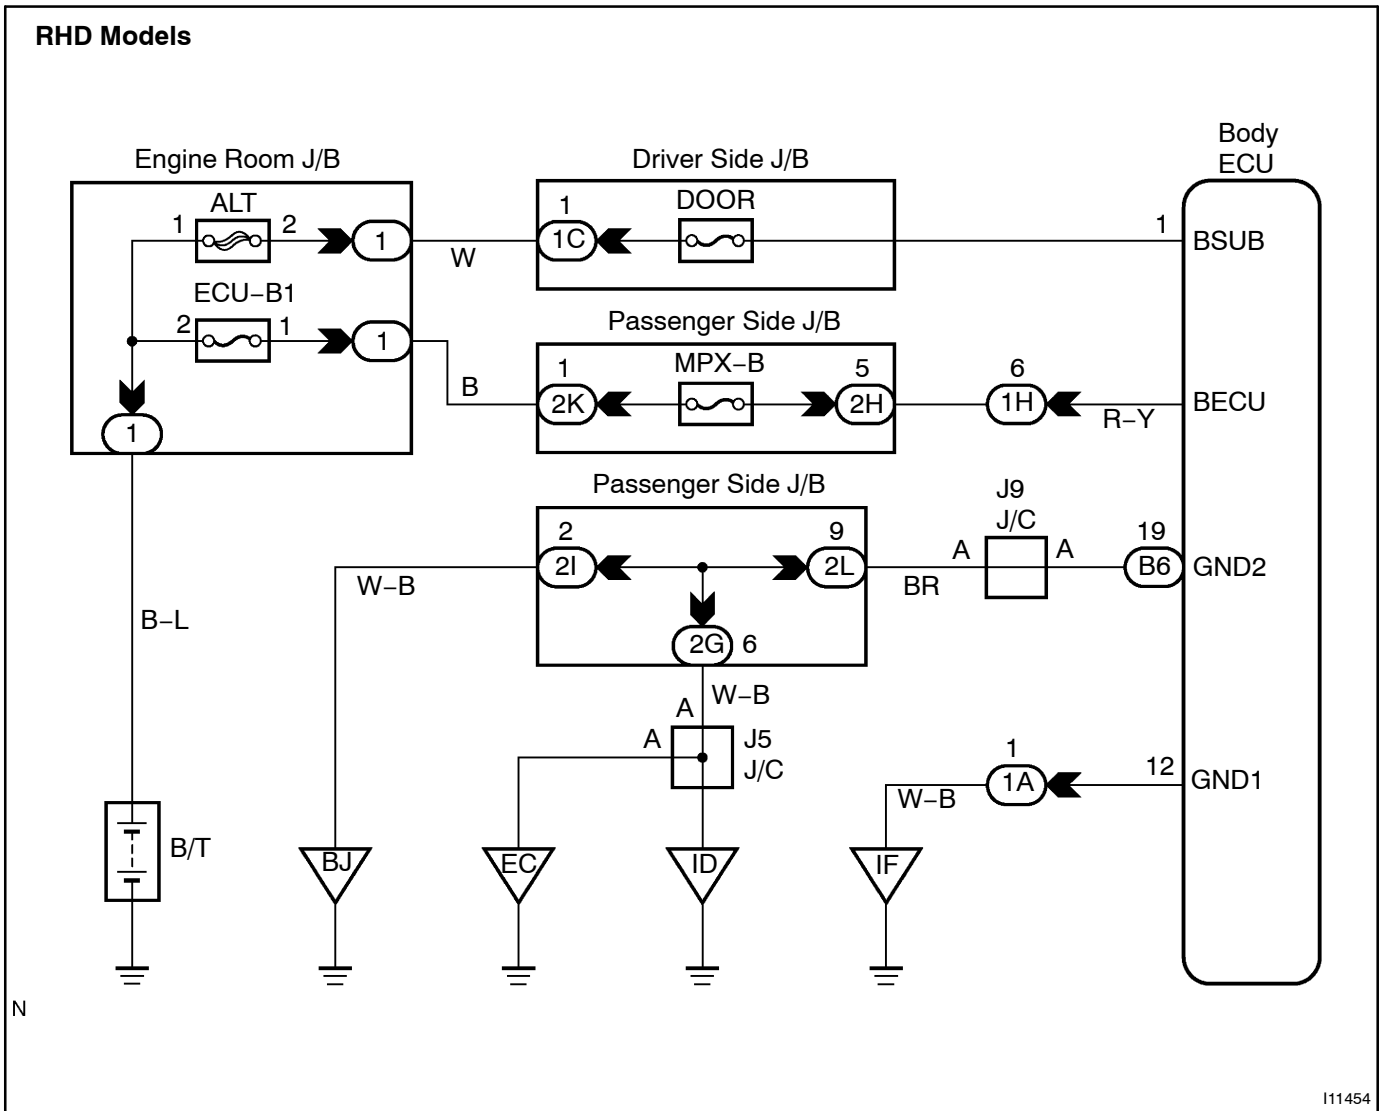

INSPECTION PROCEDURE

1 Check MPX-B and DOOR fuse.

CHECK:

Check continuity of MPX-B and DOOR fuse.

OK:

Continuity

NG

Replace the failure fuse.

OK

2 Check voltage between terminals BECU, BSUB and GND, GND2 of Body ECU connector.

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals BECU, BSUB and GND, GND2.

OK:

Voltage: 10 - 14V

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-554)

NG

3 Check wireharness and connector between Body ECU and body ground.

NG

Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between Body ECU and battery.