



Luggage opener relay and motor

WIRING DIAGRAM

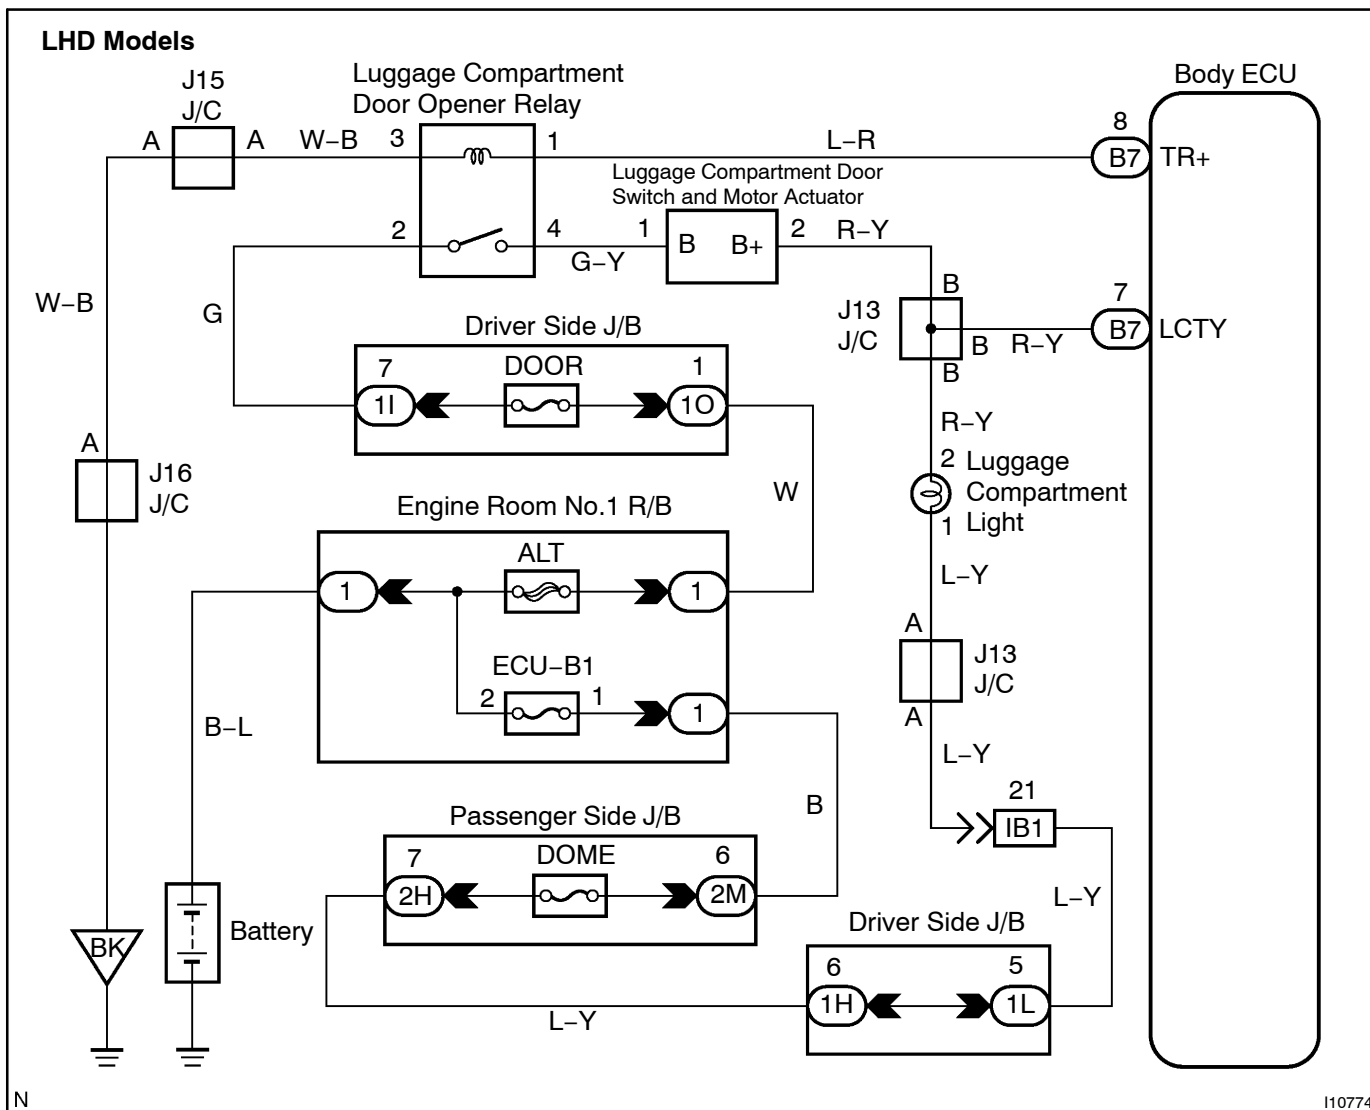

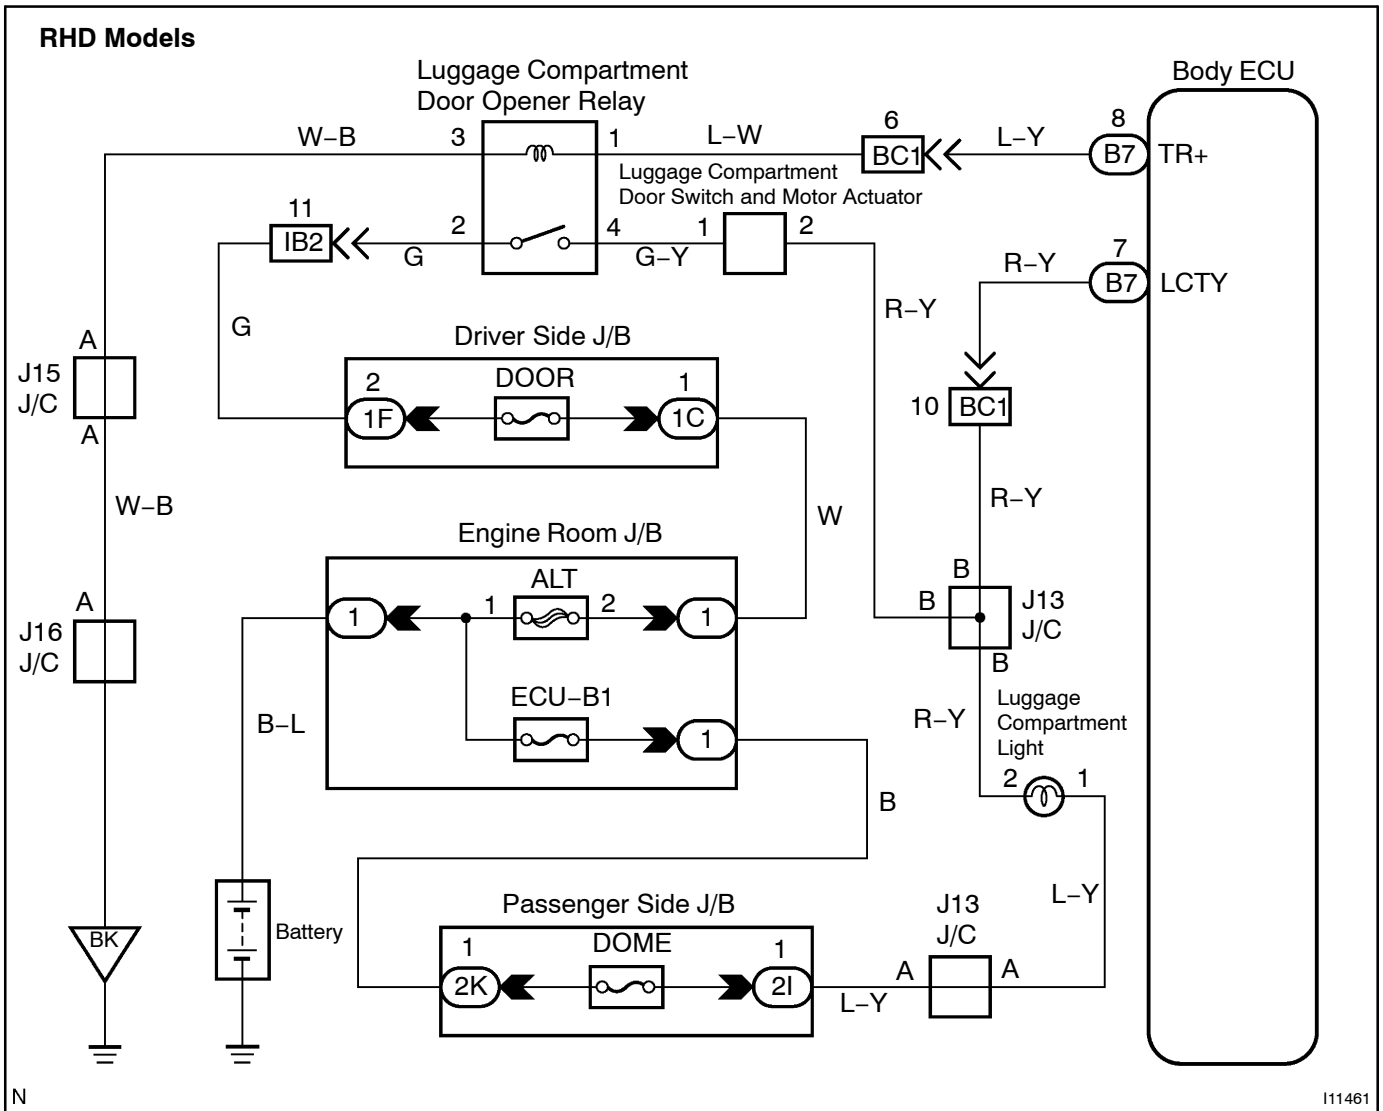

INSPECTION PROCEDURE

HINT:

In case of using the hand-held tester, start the inspection from step 1 and in case of not using the hand-held tester, start from step 2.

1 Check luggage opener motor using hand-held tester.

PREPARATION:

Connect the hand-held tester to the DLC3.

CHECK:

Check that the luggage opener motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-554)

NG

2 Check luggage opener motor. (See page BE-114)

NG

Replace the luggage opener motor.

OK

3 Check wire harness and connector between luggage opener motor and Body ECU, and luggage opener relay and Body ECU.

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page DI-554)