

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below (Proceed to the page given for that circuit).

DTC No. (See Page)	Detection Item	Trouble Area
B1211/11 (DI-622)	Power window master switch ECU communication stop	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Power window master switch ECU</li> </ul>
B1214/14 B1215/15 (DI-626)	Communication bus malfunction (+B short)	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• ECU</li> </ul>
	Communication bus malfunction (GND short)	
B1241/41 (DI-629)	Power window master switch ECU switch circuit diagnosis	<ul style="list-style-type: none"> <li>• Power window master switch</li> </ul>
B1242/42 (DI-630)	Wireless door lock tuner circuit malfunction	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Wireless door lock tuner</li> </ul>
B1244/44 (DI-632)	Light sensor circuit malfunction	<ul style="list-style-type: none"> <li>• Light sensor</li> <li>• Wireharness</li> </ul>
B1261/61 (DI-634)	Engine and ECT ECU communication stop	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Engine and ECT ECU</li> </ul>
B1262/62 (DI-636)	A/C ECU communication stop	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• A/C ECU</li> </ul>
B1269/69 (DI-638)	Theft deterrent ECU communication stop	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Theft deterrent ECU</li> </ul>
B1271/71 (DI-640)	Combination meter ECU communication stop	<ul style="list-style-type: none"> <li>• Wireharness</li> <li>• Combination meter ECU</li> </ul>

### HINT:

- DTC 71 are not output through open door warning light on meter because of system itself.
- When some of the DTC 14, 15 is output, the DTC of other ECU communication stop is also output. In this case, please repair DTC 14, 15 first. The following shows DTCs which are output when +B or GND short occurs on communication bus.