


PARTS LOCATION


Engine Room Junction Block
 ● EFI Relay

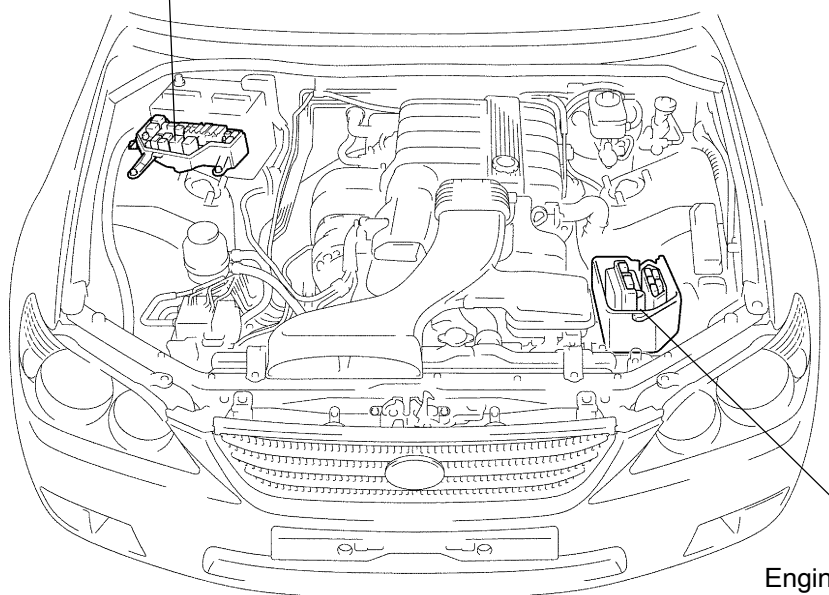

Engine and ECT ECU

Combination Meter

A/C Assembly (A/C ECU)

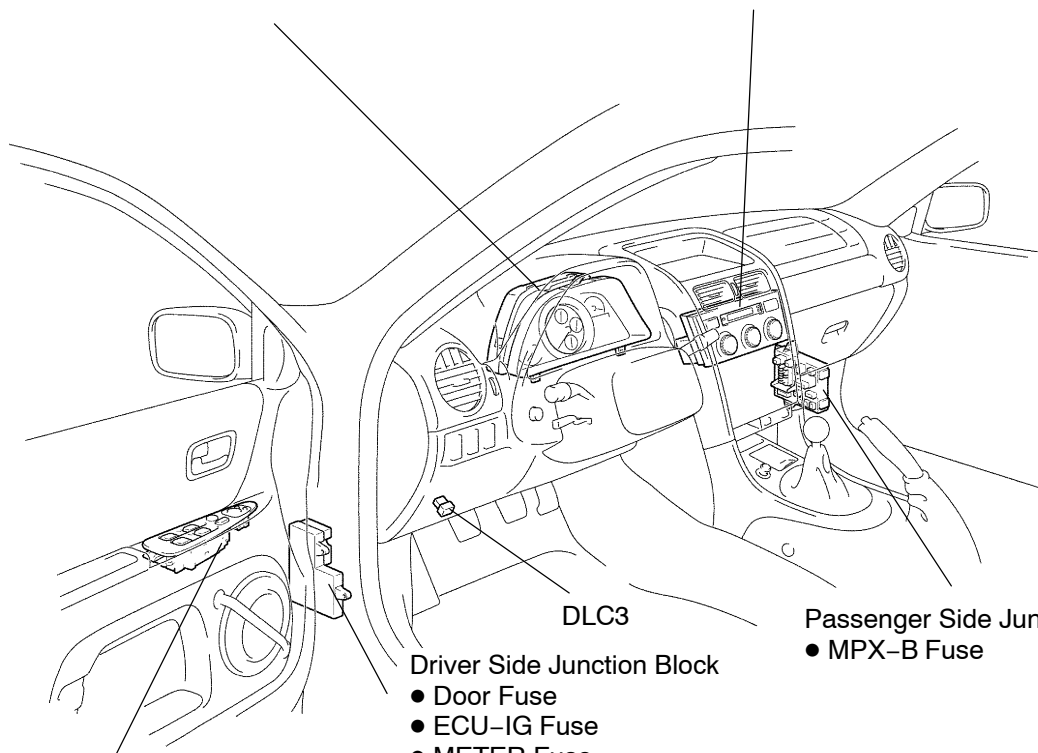

DLC3

Passenger Side Junction Block
 ● MPX-B Fuse

Driver Side Junction Block
 ● Door Fuse
 ● ECU-IG Fuse
 ● METER Fuse
 ● RADIO No.2 Fuse
 ● Body ECU

Power Window Master Switch

P

I10860