

CIRCUIT INSPECTION


DTC	B1211 / 11	Power window master switch ECU communication stop
------------	-------------------	--


CIRCUIT DESCRIPTION

This DTC is output when communication stops between power window master switch ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1211/11	No communication from power window master switch ECU more than 10 seconds.	<ul style="list-style-type: none">• Power window master switch ECU• Wireharness

WIRING DIAGRAM

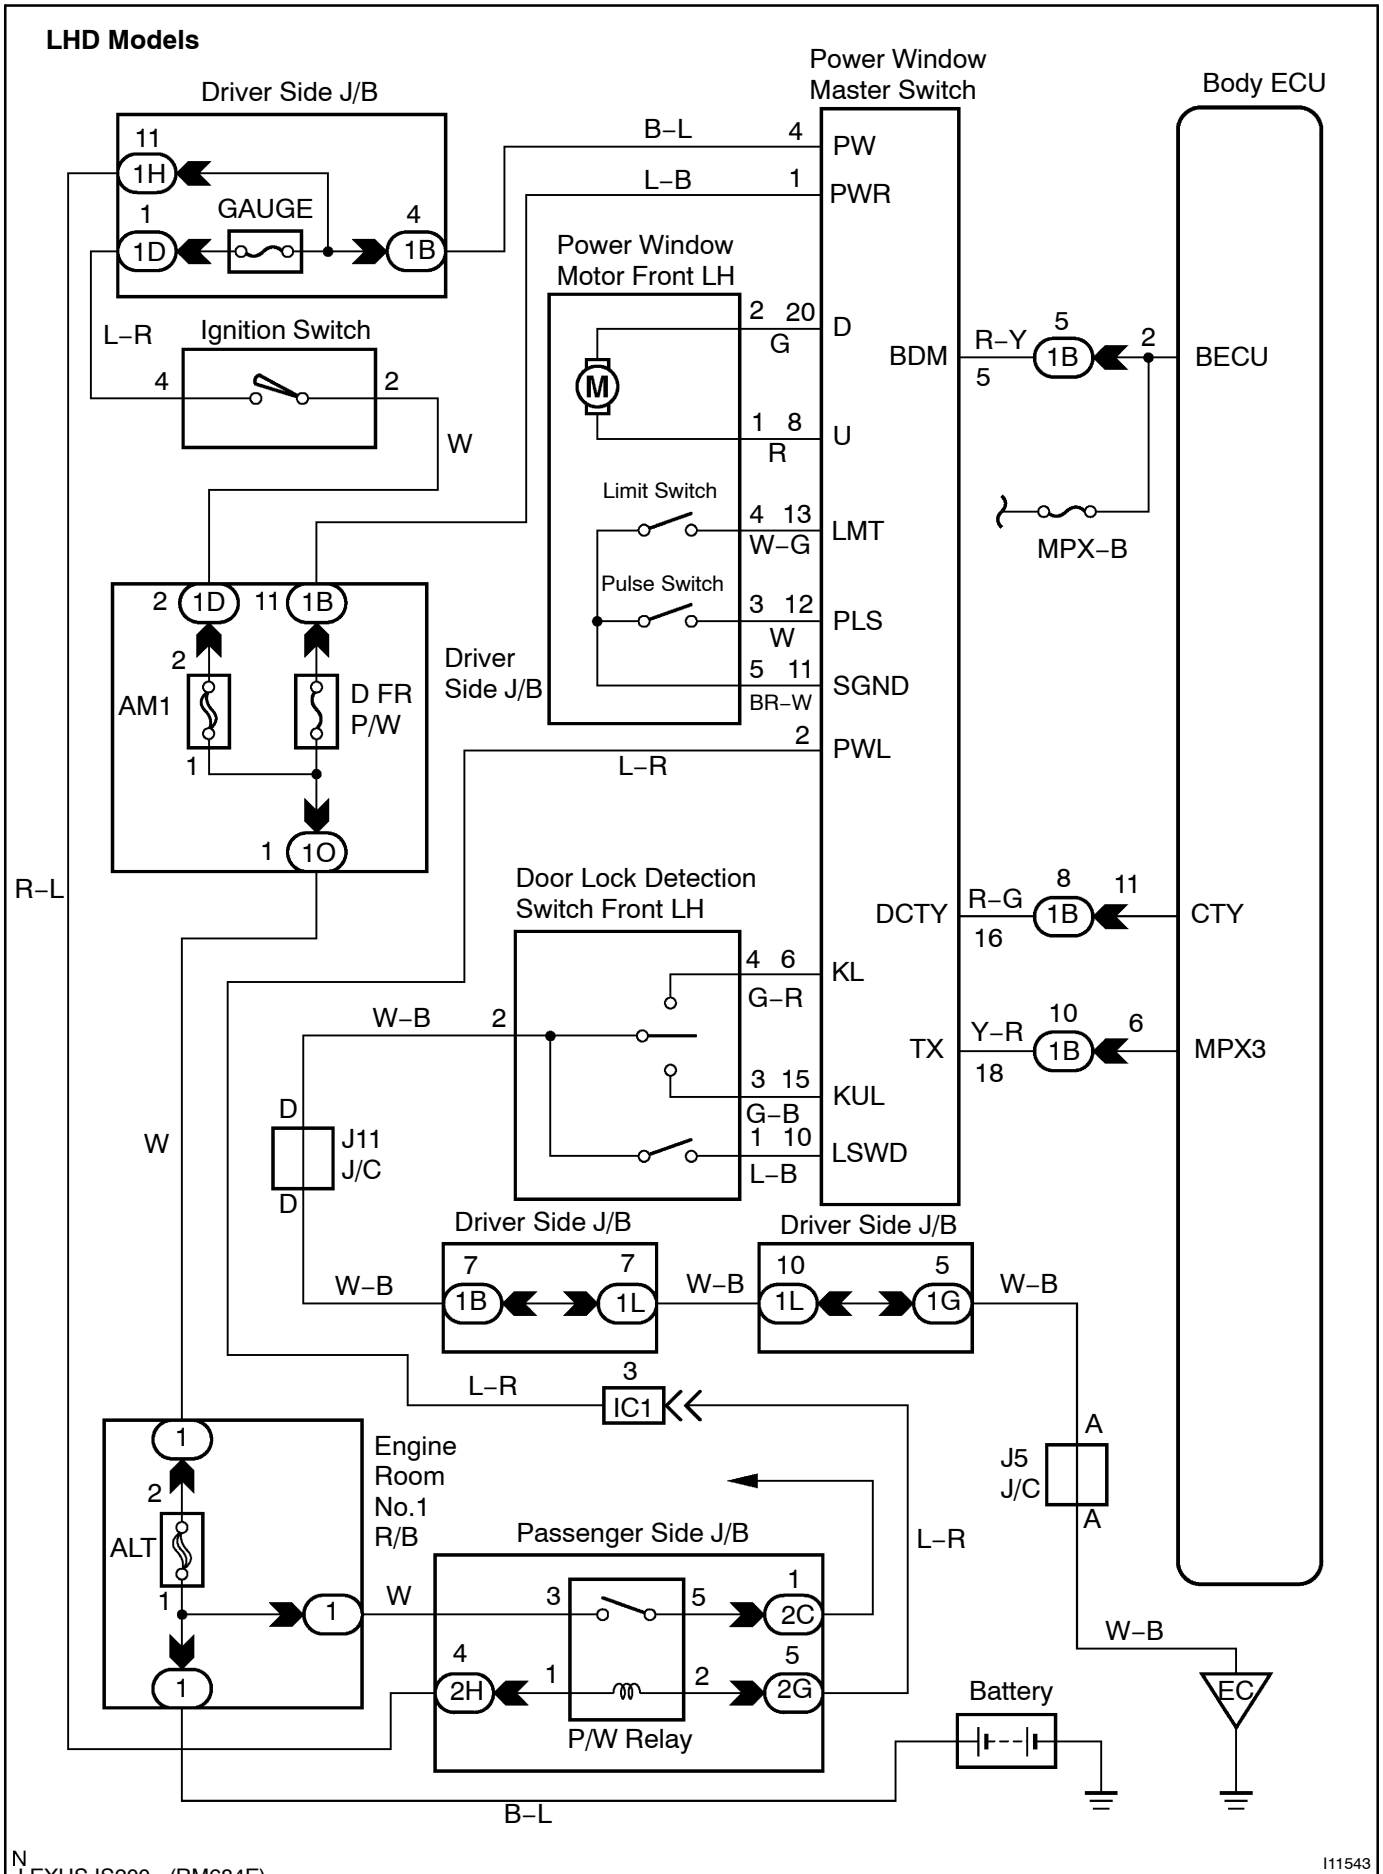

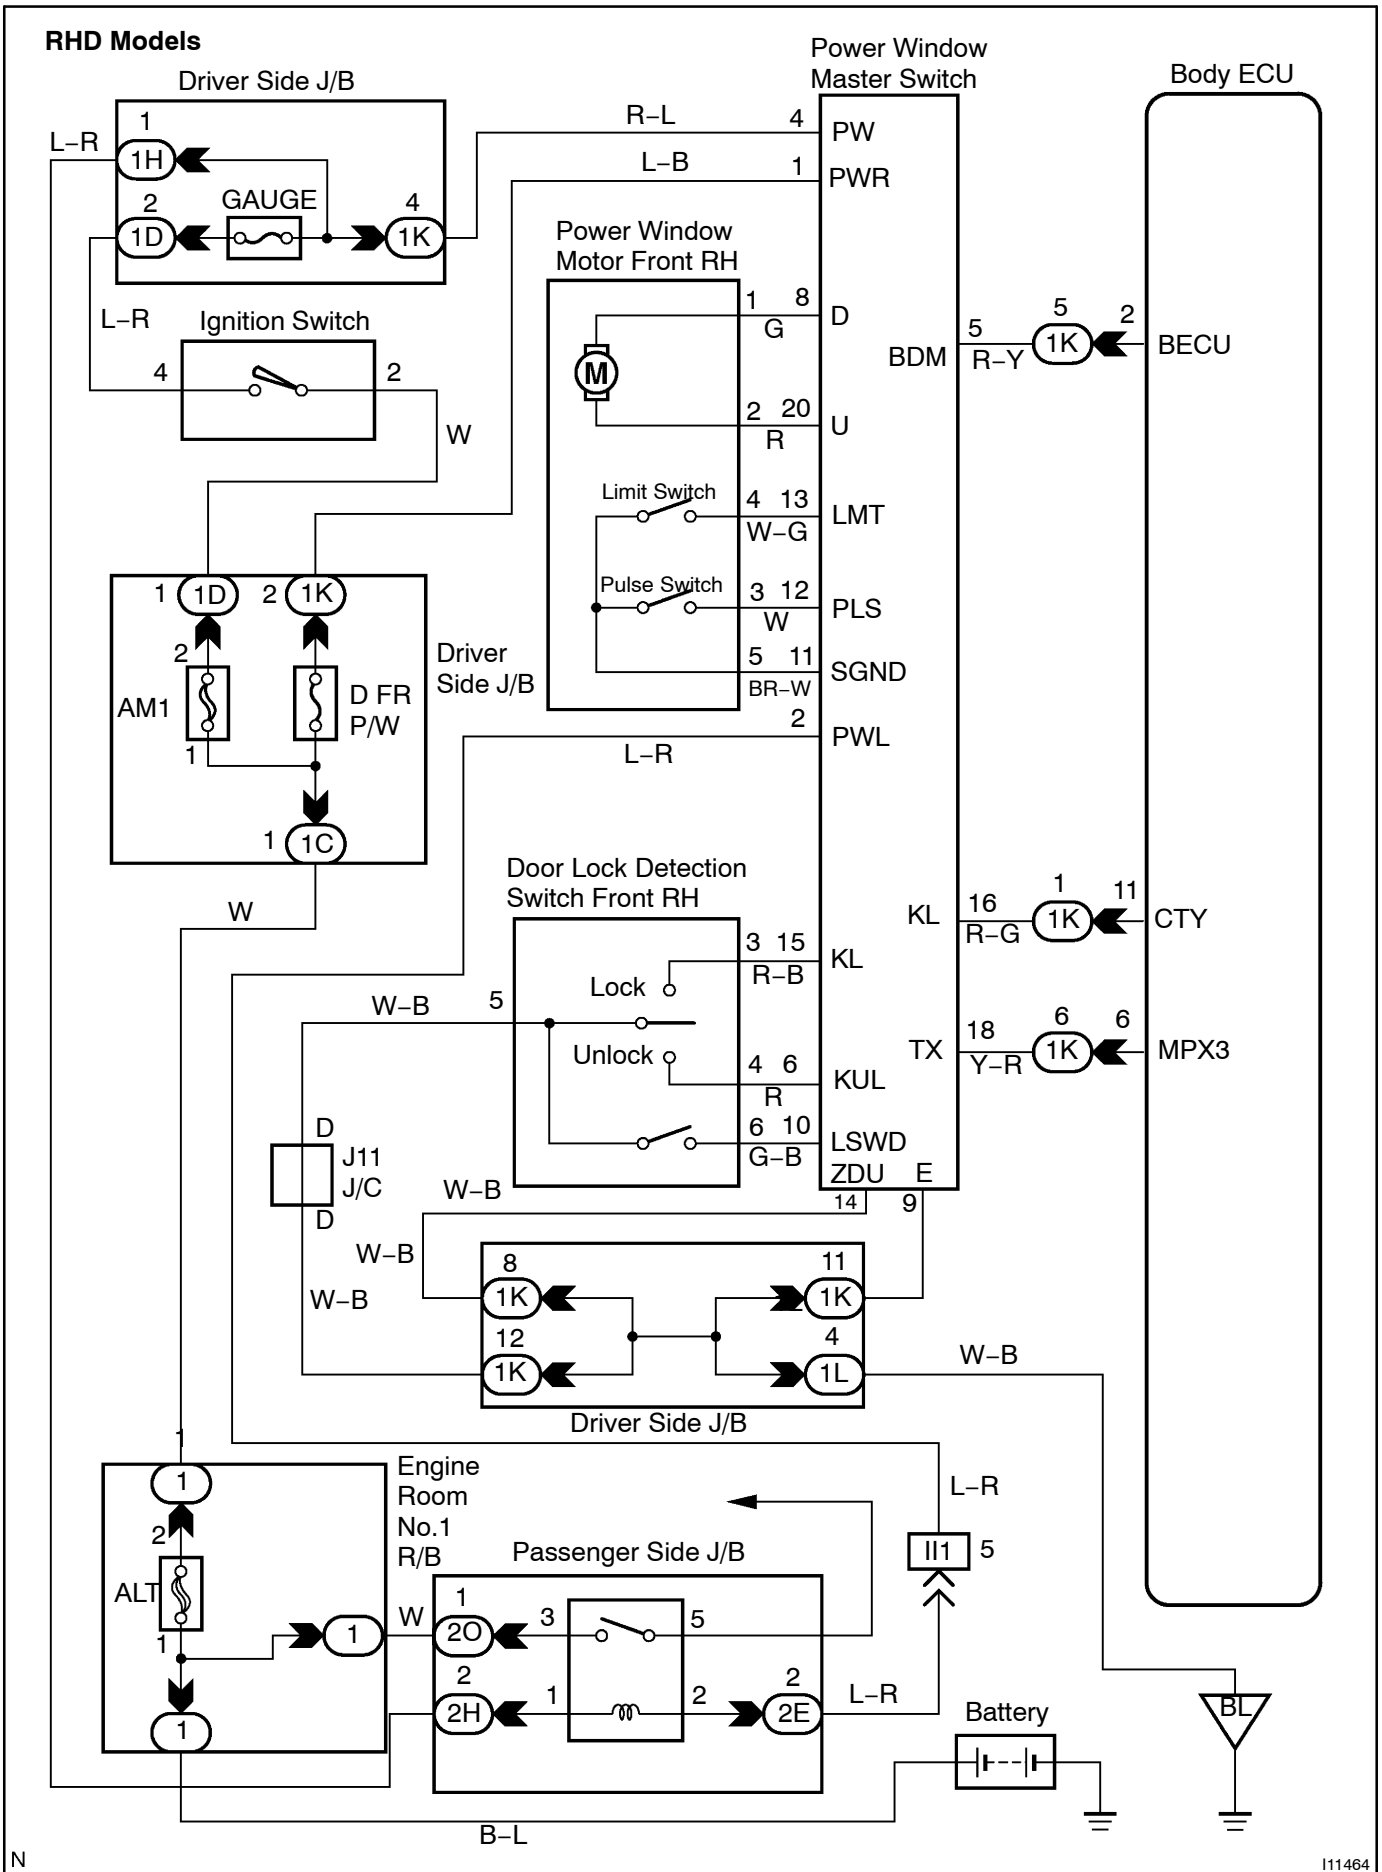


INSPECTION PROCEDURE**1 Check power window master switch ECU.****CHECK:**

Check if the driver door window glass auto up.

HINT:

With this inspection, power window master switch CPU can be diagnosed if it works normally or not.

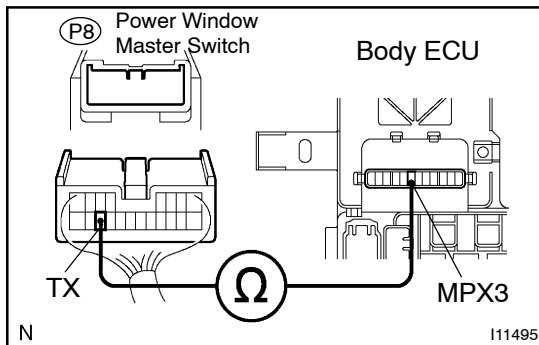NG**Replace the power window master switch.****OK****2 Check wireharness.****PREPARATION:**

Disconnect connector of body ECU and "P8" of power window master switch.

CHECK:

Check continuity between terminals MPX3 of body ECU and TX of power window master switch.

OK:

There is a continuity in wireharness.

HINT:

If there is OPEN in wireharness, please repair it.

NG**Repair or replace wireharness.****OK****Replace the power window master switch.**