

DTC	B1269 / 69	Theft deterrent ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between theft deterrent ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1273/73	No communication from theft deterrent ECU more than 10 seconds.	<ul style="list-style-type: none"> • Theft deterrent ECU • Wireharness

WIRING DIAGRAM

See [page DI-626](#).

INSPECTION PROCEDURE

1	Check theft deterrent ECU.
----------	-----------------------------------

CHECK:

Check that the operation of the theft deterrent function is normal.

HINT:


With this inspection, the theft deterrent ECU CPU can be diagnosed if it works normally or not.

NG

Replace the theft deterrent ECU.

OK

2 Check wireharness

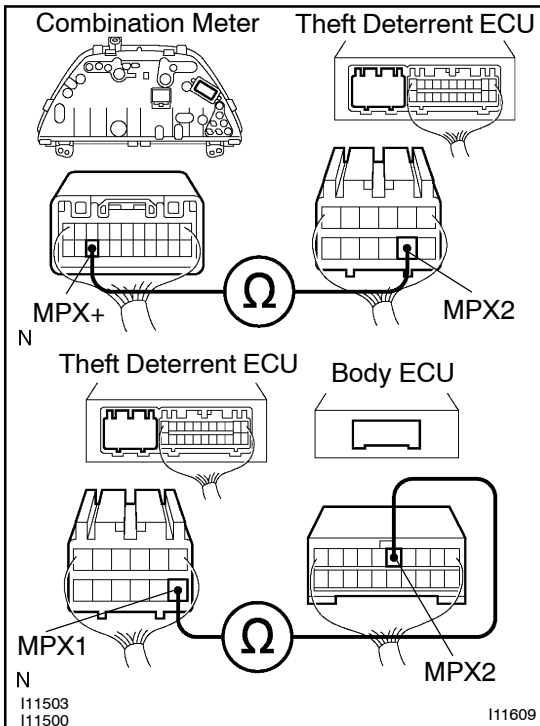

PREPARATION:

Disconnect connector "B6" of body ECU, "C10" of combination meter ECU and "T5" of theft deterrent ECU.

CHECK:

- Check continuity between terminals MPX2 of theft deterrent ECU and MPX+ of combination meter ECU.
- Check continuity between terminals MPX2 of body ECU and MPX1 of theft deterrent ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the theft deterrent ECU.