

DTC	B1271 / 71	Combination meter ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between combination meter ECU and body ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1271/71	No communication from Combination meter ECU more than 10 seconds.	<ul style="list-style-type: none"> Combination meter ECU Wireharness

WIRING DIAGRAM

See page DI-626.

INSPECTION PROCEDURE

1	Check combination meter ECU.
----------	-------------------------------------

CHECK:

Start the engine and check that the speed meter and tacometer operate normally.

HINT:


With this inspection, the combination meter ECU CPU can be diagnosed if it works normally or not.

NG

Replace the combination meter ECU.

OK

2 Check wireharness

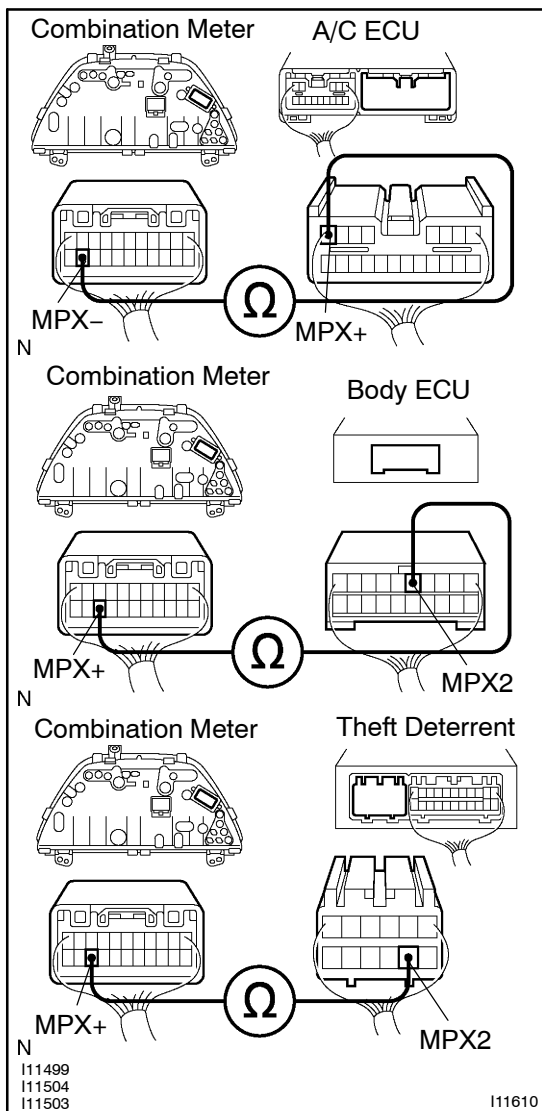

PREPARATION:

Disconnect connector "A15" of A/C ECU, "C10" of combination meter ECU "B6" of body ECU and "T5" of theft deterrent ECU.

CHECK:

- Check continuity between terminals MPX+ of A/C ECU and MPX- of combination meter ECU.
- w/o Theft Deterrent System:
Check continuity between terminals MPX+ of combination meter and MPX2 of body ECU.
w/ Theft Deterrent System:
Check continuity between terminals MPX+ of combination meter and MPX2 of theft deterrent ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the combination meter ECU.