

PROBLEM SYMPTOMS TABLE

HINT:

Inspect the input/output voltage of the terminals which are described in the column of terminal in the table. Inspect other terminals which are not described referring to "Terminal of ECU".

Symptom	Suspect Area	See page
The screen is dark, nothing shines on the screen.	1. Multi display (connector "A") 2. Wire harness and connector	DI-655 IN-32
Nothing appears on the screen. (Back light lights up.)	1. Multi display (Terminal R, G, B) 2. Navigation ECU (Connector B terminal ACC, +B Connector A terminal R, G, B) 3. Wire harness and connector	DI-655 DI-655 DI-655 IN-32
The screen is white.	1. Multi display (Terminal R, G, B) 2. Navigation ECU (Connector A terminal R, G, B) 3. Wire harness and connector	DI-655 DI-655 IN-32
The screen is in disorder. (Synchronizing disorderly.)	1. Multi display (Terminal SYNC) 2. Navigation ECU (Connector A terminal SYNC) 3. Wire harness and connector	DI-655 DI-655 IN-32
The color on the screen is unusual.	1. Multi display (Terminal R, G, B) 2. Navigation ECU (Connector A terminal R, G, B) 3. Wire harness and connector	DI-655 DI-655 IN-32
Remote control switch does not work.	1. Remote controller 2. Cradle 3. Display ECU 4. Wire harness	- - DI-655 IN-32
GPS mark does not appear at any time and at any place.	1. Navigation ECU (Diagnosis check) 2. Wire harness and connector	DI-655 IN-32
A cursor on present site does not move.	1. Navigation ECU (SPD signal is checked on the "CAR SIGNAL INFORMATION" during diagnosis check.) 2. Wire harness and connector	DI-655 IN-32
Movement of cursor on present site is always unusual.	1. Navigation ECU	DI-655
Even though the battery has not been removed, the route and destination are not displayed.	1. Navigation ECU (Connector B terminal "+B") 2. Wire harness and connector	DI-655 IN-32
Navigation voice can not be heard at all from the driver's side speaker.	1. Navigation ECU (Volume adjustment)	DI-655
No sound except the navigation voice can be heard at all from the driver's side speaker.	1. Power amplifier (Connector A terminal FL+, FL-) 2. Navigation ECU (Connector "C" terminal "AUI+", "AUI-", "AUO+", "AUO-") 3. Wire harness and connector	DI-655 DI-655 IN-32
No sound can be heard at all from the driver's side speaker.	1. Driver's side speaker 2. Wire harness and connector	- IN-32

No sound can be heard from any speakers.	1. See "AUDIO SYSTEM"	BE-158
No map is Multi displayed on the screen.	1. Navigation ECU (Diagnosis check)	DI-655