

# PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See Page
Whole functions of the A/C system does not operate	<ol style="list-style-type: none"> <li>A/C control assembly</li> <li>ACC power source circuit</li> </ol>	<a href="#">IN-32</a> <a href="#">DI-712</a>
Air Flow Control: No blower operation	<ol style="list-style-type: none"> <li>ACC power source circuit</li> <li>Heater main relay circuit</li> <li>Blower motor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-712</a> <a href="#">DI-715</a> <a href="#">DI-718</a> <a href="#">IN-32</a>
Air Flow Control: No blower control	<ol style="list-style-type: none"> <li>Heater main relay circuit</li> <li>Blower motor circuit</li> <li>A/C control assembly</li> <li>Solar sensor circuit</li> </ol>	<a href="#">DI-715</a> <a href="#">DI-718</a> <a href="#">IN-32</a> <a href="#">DI-685</a>
Air Flow Control: Insufficient air flow	Blower motor circuit	<a href="#">DI-718</a>
Temperature Control: No cool air comes out	<ol style="list-style-type: none"> <li>Refrigerant volume</li> <li>Drive belt tension</li> <li>Refrigeration system inspection with manifold gauge set</li> <li>Compressor circuit</li> <li>Pressure switch circuit</li> <li>Air mix damper position sensor circuit</li> <li>Air mix damper control servomotor circuit</li> <li>Room temp. sensor circuit</li> <li>Ambient temp. sensor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">AC-23</a> <a href="#">AC-16</a> <a href="#">AC-3</a> <a href="#">DI-721</a> <a href="#">DI-688</a> <a href="#">DI-691</a> <a href="#">DI-697</a> <a href="#">DI-676</a> <a href="#">DI-679</a> <a href="#">IN-32</a>
Temperature Control: No warm air comes out	<ol style="list-style-type: none"> <li>Air mix damper position sensor circuit</li> <li>Air mix damper control servomotor circuit</li> <li>Room temp. sensor circuit</li> <li>Ambient temp. sensor circuit</li> <li>Evaporator temp. sensor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-691</a> <a href="#">DI-697</a> <a href="#">DI-676</a> <a href="#">DI-679</a> <a href="#">DI-682</a> <a href="#">IN-32</a>
Temperature Control: Output air is warmer or cooler than the set temperature or response is slow	<ol style="list-style-type: none"> <li>Refrigerant volume</li> <li>Drive belt tension</li> <li>Refrigeration system inspection with manifold gauge set</li> <li>Cooling fan system</li> <li>Solar sensor circuit</li> <li>Room temp. sensor circuit</li> <li>Ambient temp. sensor circuit</li> <li>Evaporator temp. sensor circuit</li> <li>Air mix damper position sensor circuit</li> <li>Air mix damper control servomotor circuit</li> <li>Air inlet damper control servomotor circuit</li> <li>Condenser</li> <li>Evaporator</li> <li>Heater radiator</li> <li>Expansion valve</li> <li>A/C control assembly</li> </ol>	<a href="#">AC-23</a> <a href="#">AC-16</a> <a href="#">AC-3</a> <a href="#">CO-22</a> <a href="#">DI-685</a> <a href="#">DI-676</a> <a href="#">DI-679</a> <a href="#">DI-682</a> <a href="#">DI-691</a> <a href="#">DI-697</a> <a href="#">DI-697</a> <a href="#">AC-48</a> <a href="#">AC-32</a> <a href="#">AC-32</a> <a href="#">AC-53</a> <a href="#">IN-32</a>

## DIAGNOSTICS - AIR CONDITIONING SYSTEM

Symptom	Suspect Area	See Page
Temperature Control: No temperature control (only Max. cool or Max. warm)	<ol style="list-style-type: none"> <li>Room temp. sensor circuit</li> <li>Ambient temp. sensor circuit</li> <li>Air mix damper position sensor circuit</li> <li>Air mix damper control servomotor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-676</a> <a href="#">DI-679</a> <a href="#">DI-691</a> <a href="#">DI-697</a> <a href="#">IN-32</a>
No air inlet control	<ol style="list-style-type: none"> <li>Air inlet damper control servomotor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-700</a> <a href="#">IN-32</a>
No air flow mode	<ol style="list-style-type: none"> <li>Air outlet damper position sensor circuit</li> <li>Air outlet damper control servomotor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-694</a> <a href="#">DI-703</a> <a href="#">IN-32</a>
Engine idle up does not occur, or is continuous	<ol style="list-style-type: none"> <li>Compressor circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-721</a> <a href="#">IN-32</a>
Set temp. value displayed does not change up with operation of temp. control switch.	A/C control assembly	<a href="#">IN-32</a>
DTC not recorded. Set mode is cleared when IG switch is turned off.	<ol style="list-style-type: none"> <li>Back-up power source circuit</li> <li>A/C control assembly</li> </ol>	<a href="#">DI-706</a> <a href="#">IN-32</a>