

DISASSEMBLY

1. REMOVE WATER OUTLET

Remove the 2 bolts, 2 nuts, water outlet and gasket.

2. REMOVE WATER TEMPERATURE SENSOR

3. REMOVE CAMSHAFT POSITION SENSOR

- (a) Remove the bolt and position sensor.
- (b) Remove the O-ring from the position sensor.

4. A/T:


REMOVE CYLINDER HEAD REAR PLATE

Remove the 2 bolts, nut, rear plate and gasket.

5. REMOVE VALVE LIFTERS

HINT:

Arrange the valve lifters in the correct order.

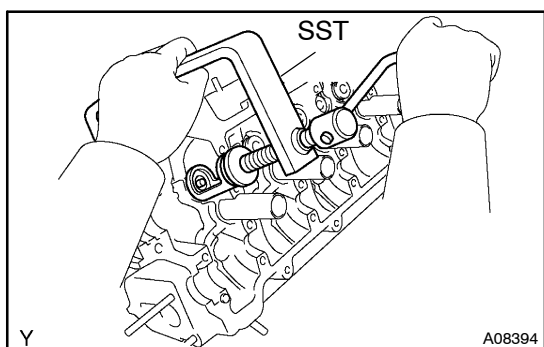

6. REMOVE VALVES


- (a) Using SST, compress the valve spring and remove the 2 keepers.

SST 09202-70020 (09202-00010)

- (b) Remove the spring retainer, valve spring, valve and spring seat.

HINT:

Arrange the valves, valve springs, spring seats and spring retainers in the correct order.

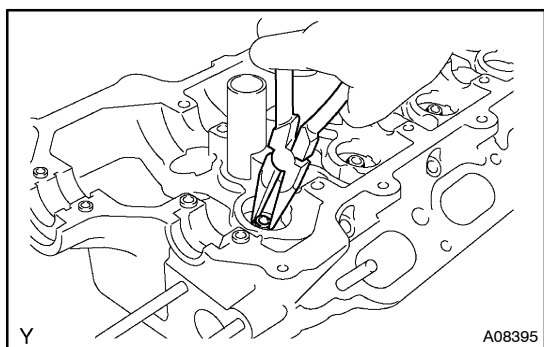

- (c) Using needle-nose pliers, remove the oil seal.