


INJECTOR ON-VEHICLE INSPECTION

SF09-03

1. INSPECT INJECTOR OPERATION


Check operation sound from each injector.

- (1) With the engine running or cranking, use a sound scope to check that there is normal operating noise in proportion to engine speed.

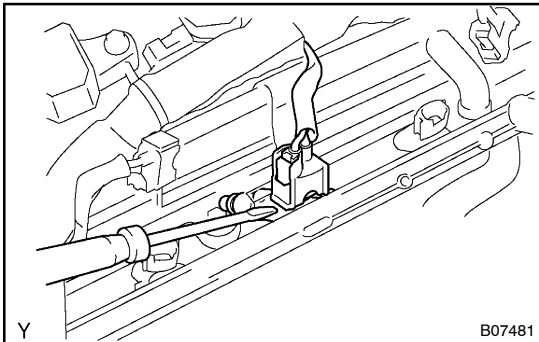

- (2) If you have no sound scope, you can check the injector transmission operation with a screwdriver.

If no sound or an unusual sound is heard, check the wiring connector, injector or injection signal from the ECU.

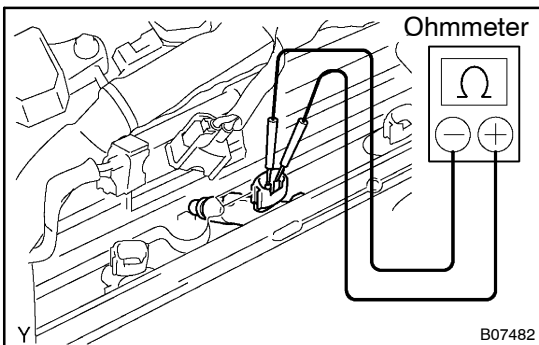

2. INSPECT INJECTOR RESISTANCE

- (a) Disconnect the injector connectors.
- (b) Using an ohmmeter, measure the resistance between the terminals.

Resistance: 13.4 – 14.2 Ω at 20°C (68°F)

If the resistance is not as specified, replace the injector.

- (c) Reconnect the injector connectors.