


## REMOVAL

1. REMOVE AIR CLEANER INLET
2. REMOVE AIR CLEANER ASSEMBLY

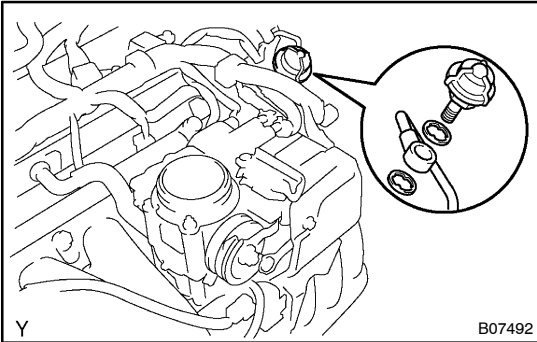

3. REMOVE FUEL PRESSURE PULSATION DAMPER
- Using SST, remove the pulsation damper and 2 upper gaskets.

SST 09617-24011

### CAUTION:

- Put a shop towel under the delivery pipe.
- Slowly loosen the pulsation damper.