



INSTALLATION

1. **INSTALL FUEL PRESSURE PULSATION DAMPER**
 - (a) Temporarily install the fuel inlet pipe and pulsation damper with 2 new upper gaskets.
 - (b) Using SST, tighten the pulsation damper.
SST 09617-24011

Torque:
32 N·m (320 kgf·cm, 23 ft·lbf)
27 N·m (270 kgf·cm, 20 ft·lbf) for using SST
2. **REMOVE AIR CLEANER ASSEMBLY**
Torque: 5 N·m (50 kgf·cm, 43 in·lbf)
3. **REMOVE AIR CLEANER INLET**
Torque: 7.5 N·m (75 kgf·cm, 65 in·lbf)