



INSPECTION

INSPECT INTAKE AIR CONTROL VALVE

- (a) Disconnect the vacuum hose from the intake manifold.
- (b) Apply vacuum (33 kPa, 250 mmHg, 9.7 in.Hg) to the intake air control valve assembly, check that the actuator rod moves.