



INSTALLATION

1. **INSTALL INTAKE AIR CONTROL VALVE ASSEMBLY**
 - (a) Install a new gasket and the intake air control valve assembly with the 4 bolts.
 - (b) Connect the vacuum hose to the intake manifold.

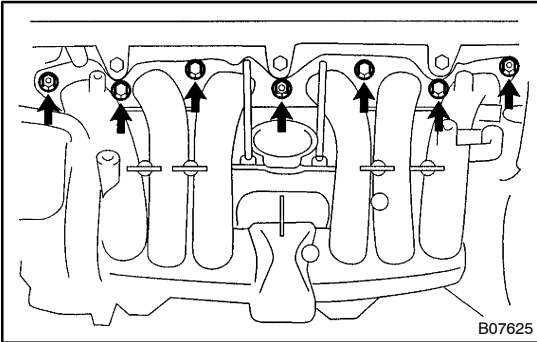

2. **INSTALL INTAKE MANIFOLD**
 - (a) Install 6 new gaskets and the intake manifold with the 4 bolts and 3 nuts.
 - (b) Connect the brake booster vacuum hose to the intake manifold.
 - (c) Connect the PCV hose to the intake manifold.

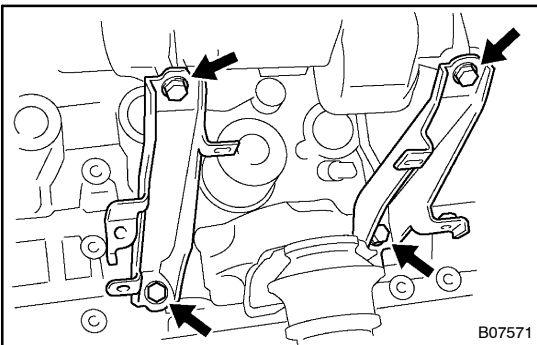

- (d) Install the No. 1 air intake chamber stay with the 2 bolts.
- (e) Install the No. 2 air intake chamber stay with the 2 bolts.
3. **INSTALL DELIVERY PIPE AND INJECTORS** (See page FI-25)
4. **INSTALL THROTTLE BODY** (See page FI-41)
5. **INSTALL OIL DIPSTICK AND GUIDE FOR ENGINE** (See page EM-71)
6. **INSTALL NO.2 ENGINE UNDER COVER**
7. **INSTALL AIR CLEANER ASSEMBLY**
8. **INSTALL AIR CLEANER INLET**