



EFI MAIN RELAY INSPECTION

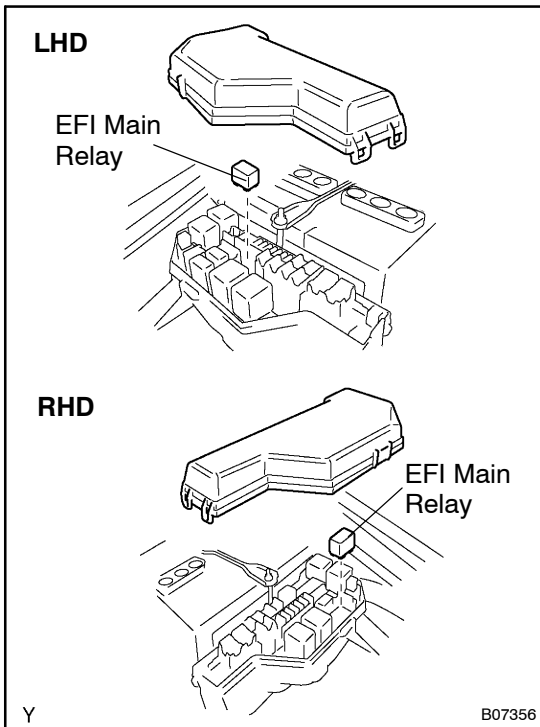


1. REMOVE ENGINE ROOM NO.2 R/B COVER
2. REMOVE EFI MAIN RELAY (Marking:EFI)

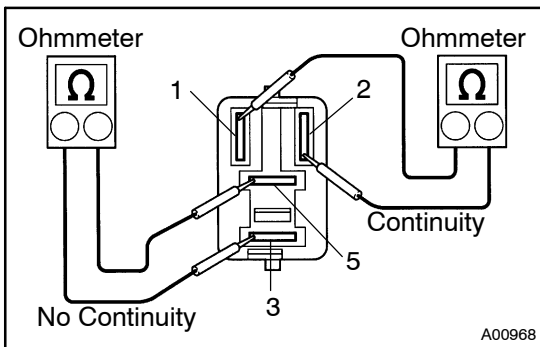

3. INSPECT EFI MAIN RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.
 - (2) Check that there is no continuity between terminals 3 and 5.
If there is continuity, replace the relay.

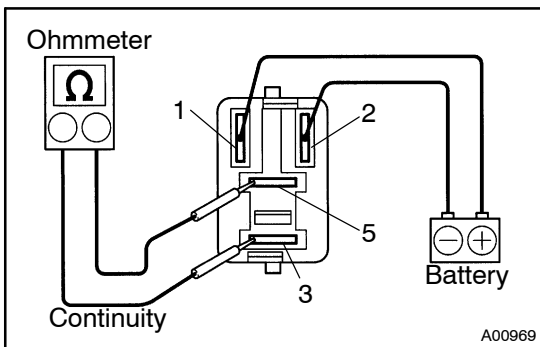

- (b) Inspect the relay operation.
 - (1) Apply battery voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
If there is no continuity, replace the relay.

4. REINSTALL EFI MAIN RELAY
5. REINSTALL ENGINE ROOM NO.2 R/B COVER