


CIRCUIT OPENING RELAY INSPECTION


FI0LP-01

1. REMOVE ENGINE ROOM NO.2 R/B COVER
2. REMOVE CIRCUIT OPENING RELAY

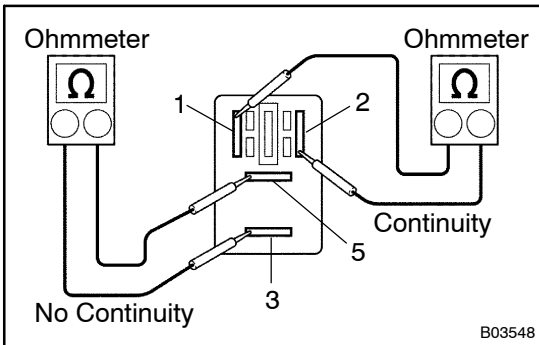

3. INSPECT CIRCUIT OPENING RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 If there is no continuity, replace the relay.
 - (2) Check that there is no continuity between terminals 3 and 5.
 If there is continuity, replace the relay.

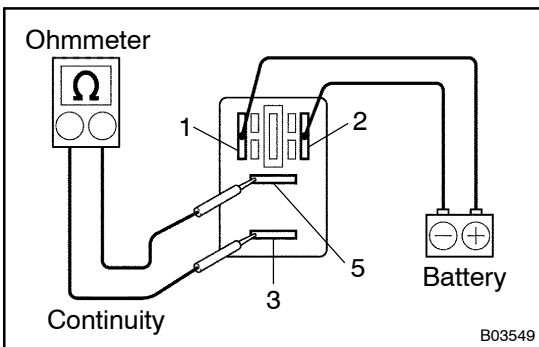

- (b) Inspect the relay operation.
 - (1) Apply battery across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
 If there is no continuity, replace the relay.

4. REINSTALL CIRCUIT OPENING RELAY
5. REINSTALL ENGINE ROOM NO.2 R/B COVER